

HD Satellite Recorder
Digital Innovation Life

User's Manual

AV 7000HD PVR



ATEVIO

INDEX

INDEX	3
Precautions.....	5
1. Important Safety Instructions.....	5
2. Notice	5
3. Copyright	6
4. Disclaimer.....	6
5. Trademarks	6
Before You Begin	7
1. Main Features	7
2. Accessories	8
Hardware Description	9
1. Front Panel Configuration	9
2. VFD(Vacuum Fluorescent Display)	10
3. Rear Panel Configuration.....	11
4. Remote Control Unit.....	12
5. Multi-Brand IR Remote Controller Setting.....	14
Connections Diagram	16
1. Receiver to TV with Digital A/V Output.....	16
2. Receiver to TV With Analog A/V Output.....	17
3. Receiver to TV and VCR	18
4. Connecting to Dish	18
4.1 Connecting one dish to both tuners by Loop through	18
4.2 Connecting each Dish to each Tuner.....	19
4.3 Connecting Antenna cable to each Tuner using DiSEqC SW (Recommend).....	19
Guide of Functions	20
1. Selecting a Service.....	20
1.1 Using CH UP/DOWN buttons.....	20
1.2 Using Service List	20
1.3 Using Instant Service List.....	20
1.4 Using Recent Service List.....	21
2. Information Window.....	21
3. Multi-Picture Display. (*)	21
4. Electronic Program Guide (EPG)	21
5. Favorite Group	22
6. Volume Control.....	22
7. Pause	22
8. Subtitle.....	22
9. Audio Track	23
10. Teletext	23
11. PIP (Picture in Picture).....	23

PVR (Personal Video Recorder) Function	25
1. Recording	25
1.1 Recording methods.....	25
1.2 Recording Edit.....	27
1.3 Long Time recording	27
1.4 Pause during recording.....	27
2. Time Shifting.....	29
3. Playback (Play List).....	30
3.1 Recorded Files	30
3.2 Imported Files	31
3.3 Music	31
3.4 Photo	31
4. Bookmark	31
5. Trick mode.....	32
Menu Map	33
Main Menu of Guide.....	34
1. System Tools.....	34
1.1 Storage Manager.....	34
1.2 Timer Settings	34
1.3 Service List Manager	35
1.4 Data Transfer.....	36
2. Configuration	37
2.1 Recording Option	37
2.2 Parental Control	37
2.3 Display Setting	37
2.4 Time Setting	38
2.5 Language Setting	38
2.6 A/V Output Setting	39
3. Installation	40
3.1 Dish Setting	40
3.2 Positioner Setting	41
3.3 Service Search.....	41
3.4 Network Setting.....	42
3.5 System Recovery	45
3.6 System Information	45
4. Utilities	46
4.1 Calculator	46
4.2 Calendar	46
4.3 CAS (Conditional Access System).....	46
Software update for Atevio via USP or Network	47
Hard Disk installtaion	48
Troubleshooting	52
Specifications	53
Code Table for Universal Remote Control Unit	Fehler! Textmarke nicht definiert.
1. TV List	55
2. Brand Table	Fehler! Textmarke nicht definiert.

Precautions

1. Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not reverse the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: *To prevent fire or shock hazard do not expose the set to rain or moisture.*

2. Notice

- These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.



The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons



To reduce the risk of electric shock, do not remove the cover (or back).

No user serviceable parts are inside.

Refer servicing to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

3. Copyright

This manual is protected by copyright laws.

Copy, use and reproduction of this manual in part or whole without FORTIS's prior written approval are prohibited.

4. Disclaimer

The manufacturers, distributors and agents are not liable to any kind of damage caused by the use of the information contained in this manual.

The instruction and descriptions which this manual contains are based on the time of this manual's production.

The manufacturer constantly updates it with new functions and technology.

All the specifications are subject to change without prior notice.

5. Trademarks



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Before You Begin

1. Main Features

- ✓ Twin Tuner HDTV PVR Receiver (H.264/ MPEG4 HD)
- ✓ Supports MPEG4 /MPEG2 - HD/SD, DVB-S2 /DVB-S
- ✓ Embedded Linux OS & Ethernet port
- ✓ Time Shifting, Recording & Playback with Internal HDD (SATA) / External HDD (USB 2.0)
- ✓ Simultaneously Records of 2 Services and allows Watching 2 others (PIP)
- ✓ Powerful Extended EPG supports and Event Recording
- ✓ Two USB 2.0 Host ports (MP3 Player & JPEG Viewer)
- ✓ Xvid file play back supported
- ✓ Ethernet port Supported
- ✓ Intelligent Blind Scan for both SD and HD TV & Multi-Satellite Search
- ✓ Premium Grade White VFD Display (12 Digit Alphanumeric)
- ✓ Premium Grade Universal remote control unit
- ✓ Multi-LNB Controlled by DiSEqC Control Version 1.0, 1.1, 1.2 and USALS
- ✓ On-Screen Display with Full Color & Resolution
- ✓ Favorite Groups
- ✓ Powerful Service List Manager for Favorites, Lock, Skip, Move, Edit and Delete
- ✓ Service Sorting by Alphabet, Transponder and CAS
- ✓ User Friendly & Multi-language Supported (OSD & Menu)
- ✓ Teletext / Subtitle Supported
- ✓ Maximum 10,000 Services(TV & Radio) Programmable
- ✓ Picture-in-Picture (PIP) & Multi-picture Display(*)
- ✓ Parental Lock / System Lock / Installation Lock
- ✓ HDMI Video & Audio Output (576i, 576p, 720p, 1080i)
- ✓ Supports Y/Pb/Pr(component) Output in HD
- ✓ CVBS(composite) Video & Audio Output via RCA
- ✓ CVBS, RGB, Y/C Video & Audio Output via TV SCRAT
- ✓ Optical Output for Digital Audio(SPDIF)
- ✓ MPEG-II Digital & Fully DVB Compliant
- ✓ Software & Service channel Database upgrade via USB & RS-232C port
- ✓ 2 Conax Card Readers and 2 Common Interface Slots
- ✓ 1W Stand-by Power Consumption

NOTE: () This feature (Multi-picture Display) will be supported later, by new s/w version by upgrading. Please refer to your local dealer / distributor.*

2. Accessories

User's Manual



Remote Control



Button cell 3V CR 2025



HDMI Cable




Loop through Cable



NOTE: If any accessories listed above are missing, contact the sales representative where you purchased this unit.


Hardware Description

1. Front Panel Configuration

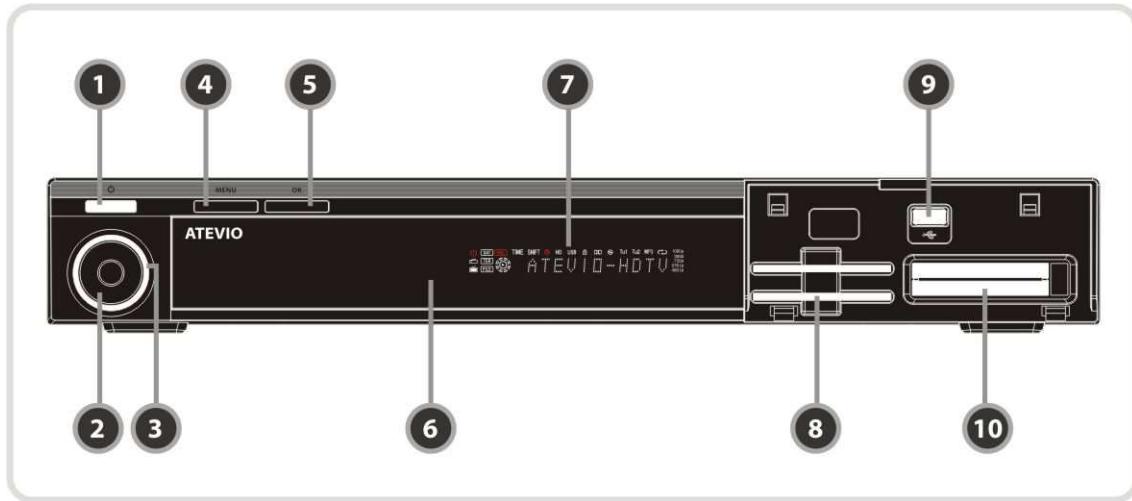

1. **POWER BUTTON & LED:** Press to switch between STANDBY and POWER ON modes.
2. **Navigation Button:**
Up/Down button (CH Up/Down): Press to change services in normal mode, or to move highlighted-bar in menu mode.
Left/Right button (Vol Up/Down): Press to change audio volume in normal mode or to navigate menu in menu mode.
3. **LED indication:** The LED lights on in running mode.
4. **MENU Button:** Press to display the main menu or to move to the previous menu.
5. **OK Button:** Press to display the service list in non-menu mode and to select an item or confirm the selection in menu mode.
6. **Remote Sensor:** Receives signal from remote controller.
7. **VFD Display:** The VFD consists of 12-digit letter and various icons. These letters and icon display the current status of receiver such as service name, service information and so on.
8. **CONAX SMARTCARD READER:** Insert smartcard for encrypted service access.
9. **USB (Front):** Use it when connecting to external USB storage device.
10. **PCMCIA:** To receive other pay-tv service you need a CA-Module(Viaccess, Irdeto, Nagravision, etc.) and a smartcard from the service provider.


2. VFD (Vacuum Fluorescent Display)

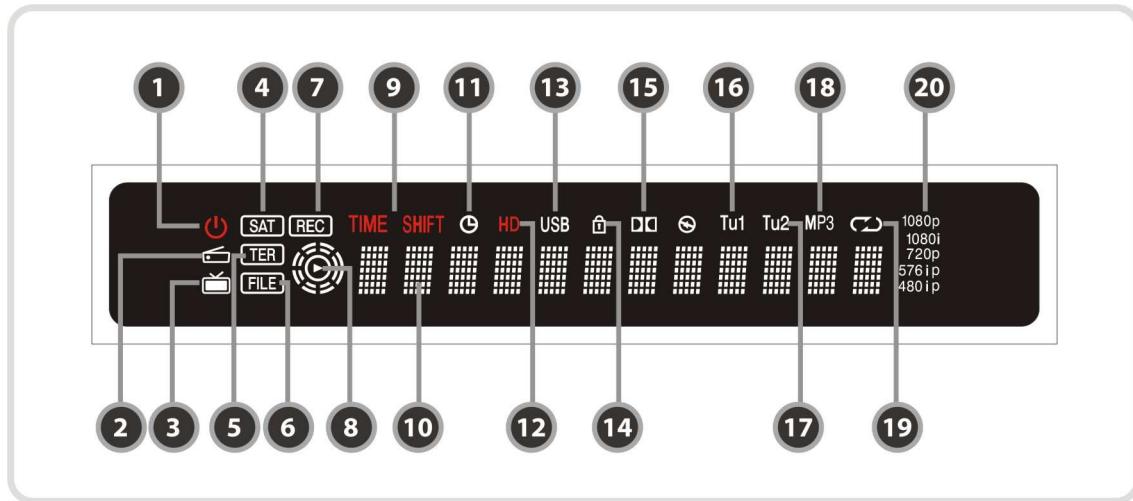


1. **Remote Indication LED:** The LED lights on when a key on the Remote Controller is pressed.
2. **Radio icon:** The icon lights on when it is change the radio service.
3. **TV icon:** The icon lights on when it is change the TV service.
4. **SAT:** Satellite mode.
5. **TER (Option):** Terrestrial mode.
6. **FILE:** Turn on when file list is displayed in the SATA HDD or USB Storage Device.
7. **REC:** Turned on during recording.
8. **PLAY Mode:** Turn on when you play the file on file list. (SATA HDD, USB Storage Device)
9. **TIME SHIFT:** Turned on during Time-shift.
10. **Information:** Display information including service name and other information.
11. **TIMER:** Turned on during timer is set.
12. **HD:** Turned on during HD service.
13. **USB:** Turned on during USB device working.
14. **LOCK:** Turned on during lock service.
15. **Dolby:** Turned on during Dolby service.
16. **Tu1:** Turned on during used Tuner1
17. **Tu2:** Turned on during used Tuner2
18. **MP3:** Turned on during MP3 listen.
19. **Repetition (*):** Turned on during recording repeatedly.
20. **Resolution:** Turned on and indicating current Resolution setting.

NOTE: (*) This icon (Repetition) will be supported later, by new s/w version by upgrading. Please refer to your local dealer / distributor.

3. Rear Panel Configuration

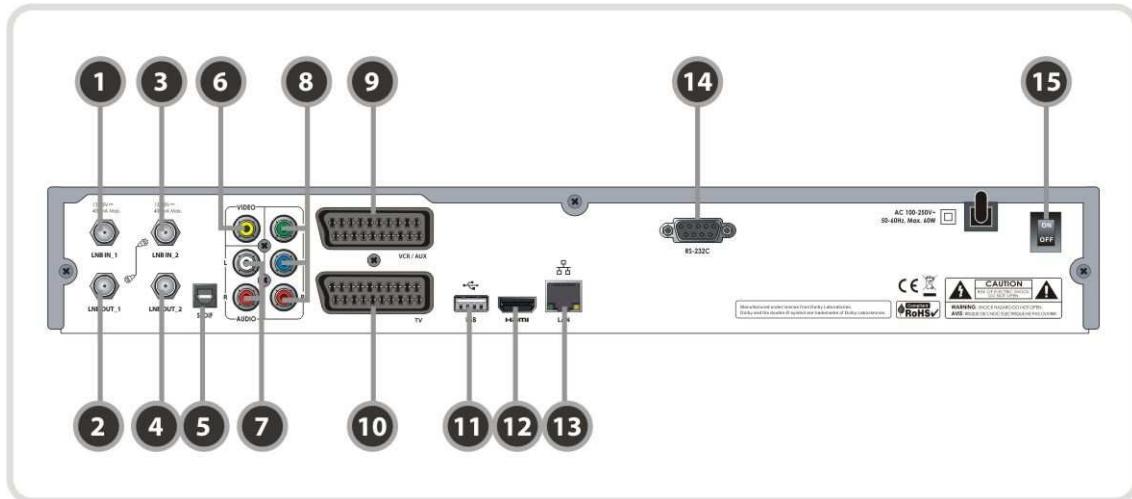

4. Remote Control Unit

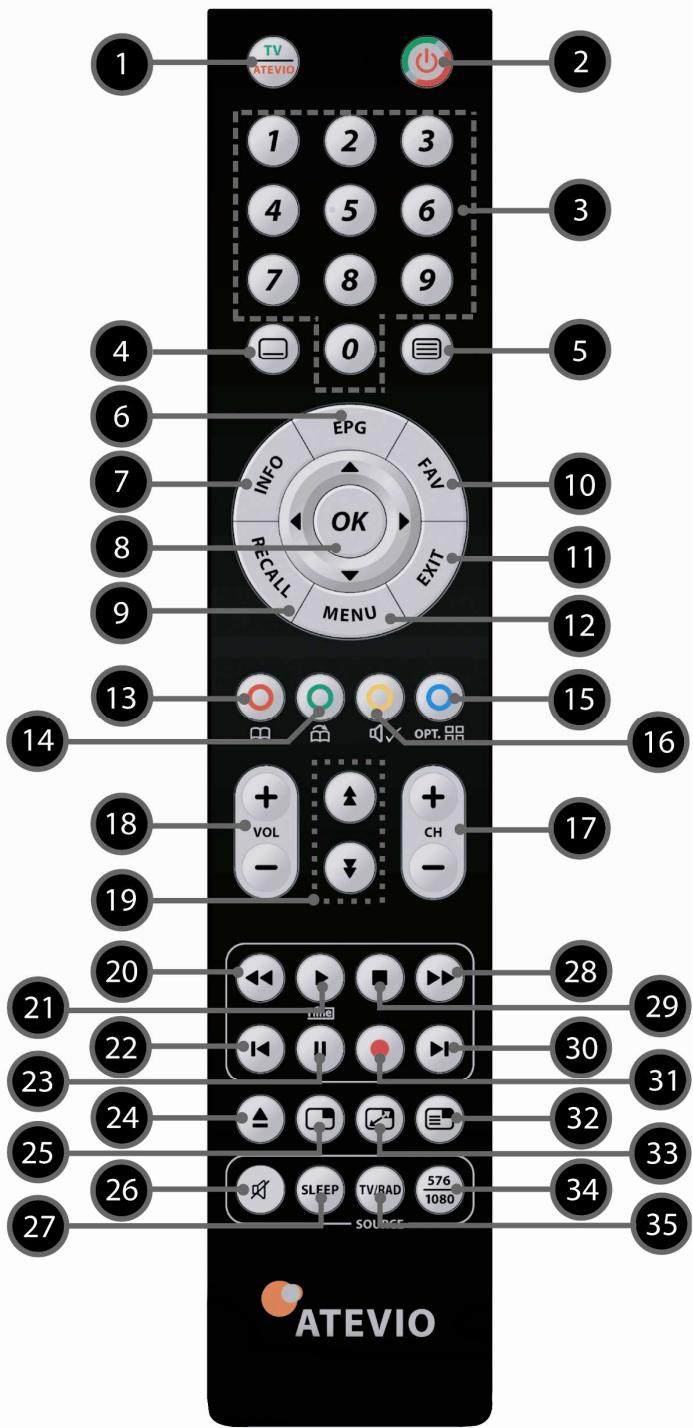

1. **TV/ATEVIO:** You can switch to TV-Function or Atevio-Function.
2. **POWER:** Turns the STB On/Off.
3. **Numeric:** Controls the numerical operation and service numbers directly.
4. **Subtitle:** To show multilingual subtitle.
5. **Teletext:** To show the digital teletext.
6. **EPG (Electronic Program Guide):** Show the TV/Radio program guide.
7. **Information:** Shows the information box of the current program. If you press one more time, a detail information box will be shown.
8. **OK or Service List:** Show the service list in non-menu mode and select an item or confirm in menu mode.
9. **Recall:** Moves to previous service.
10. **Favorite:** To display the satellites programmed into the receiver and the favorite groups.
11. **EXIT:** Exit from the menu or pop-up window.
12. **Menu:** To enter the main menu or to move to the previous menu.
13. **RED:** Used for special function in menu. **RED** key is used to sort lists in service list or go to previous day search in EPG or make/delete the current position as a bookmark.
14. **GREEN:** Used for special function in menu. **GREEN** key is used to set favorites setting in service list or go to the next bookmark position.

15. BLUE: Used for special function in menu. **BLUE** key is used to set service list option in service list or display *Multi-Picture*.(*)

NOTE: (*) This Feature (Multi-Picture) will be supported later, by new s/w version by upgrading.
Please refer to your local dealer / distributor.

16. YELLOW: Used for special function in menu. **YELLOW** key is used to find service in service list or change the audio track. If this button is pressed for more than two seconds, the **Repetition** (*) function

gets activated. This function is used to play back a recording repeatedly.

17. Channel Up & Down: To change the TV or Radio service channel.

18. Volume Up & Down: To change the Volume. If the volume down key is pressed longer than 2 seconds the sound turns off.

19. Page Up& Down: Move to the next or previous page if more than one page is available. This button also is change the location of sub picture in PIP.

20. Rewind: Rewinds at high speed. Each time you press this button the rewind speed is increased.

21. Play / Timeshift: Display the progress bar of playback when no progress bar is displayed. Start playback with normal speed. Return to normal speed from trick mode.

22. Previous File: To play the previous MP3 file in MP3 play mode. This button is also used to jump back to beginning of recording during a playback.

23. Pause: This key is used to pause the video. Press once more to resume the video.

24. Play List: To show the file list in the SATA HDD or USB Storage Device.

25. PIP (Picture in Picture): To open the PIP window.

26. Mute Button: Pressing the Mute Button mutes the Volume. Pressing it again brings back the audio.

27. Sleep: To adjust sleep timer.

28. Fast Forward: Fasts forward at high speed. Each time you press this button the speed is increased.

29. STOP: To stop time shifting, play back or recording.

30. Next File: To play the next file. This button is also used to jump to end of recording during a playback.

31. Recording: To start Recording.

32. PIP (Picture in Picture) Service List: To shown the sub-picture service list.

33. PIP Swap: Switching between main-picture and sub-picture.

34. 576/1080: To select the resolution format. Each time you press the **576/1080** button, the resolution changes in the following sequence: **576i > 576p > 720p > 1080i**.

35. TV/RADIO: Switches between TV and Radio.

**NOTE: (*) This button (Repetition) will be supported later, by new s/w version by upgrading.
Please refer to your local dealer / distributor.**

5. Multi-Brand IR Remote Controller Setting

NOTE: When there is no entry during about 10 seconds from set mode, set mode is cancelled.

1. TV programming (code according to code table)

- Press the key (TV/atevio) on the remote (at least 3 seconds) till the LED flashes 2x.
- According to your TV-equipment (mark) select the appropriate code with 3 digits from the code set (e.g.: Sony) and enter these. The LED flashes for 2x to confirm the code.
- If an invalid code with 3 digits was entered, the LED glows for 3 seconds (error announcement), and the remote is restored into the default mode.
- If your television should not react and/or if it does not react correctly, repeat programming and enter the next code with 3 digits from the list
- If none of the indicated codes steers your television, use the automatic search with the CODE 001.

2. Brand Code Search (code according to brand table)

- Switch on your TV.
- Press the key (TV/atevio) on the remote (at least 3 seconds) till the LED flashes 2x.
- Enter the code 0 0 3. The LED flashes 2x to confirm the entry.
- Enter the 3 digits code the brandlist. The LED flashes 2x, to confirm the entry.
- Press the “ON/OFF” key until the TV switches off.
- Release the key immediately and afterwards press the “OK” key to store the found TV code. (the LED glows every 1.5 seconds as long as the search is activated)
- When a code with 3 digits is not recognized the LED glows for 3 seconds and the remote is restored into the default mode. (Error announcement)
- If your TV switches off and you could not confirm the code, switch on the TV manually and start the brand search from its beginning.
- If your TV label (brand) is not in the code list (the remote flashes 5x at the end of the list), use the automatic search with the CODE 001.

3. Auto Code Search

- Press the key (TV/atevio) on the remote (at least 3 seconds) till the LED flashes 2x.
- Enter the code 0 0 1. The LED flashes 2x to confirm the entry.
- Press the “ON/OFF” key until the TV switches off.
- Release the key immediately and afterwards press the “OK” key to store the found TV cod e. (This can take up to 15 minutes)
- The LED glows every 1.5 seconds as long as the search is activated
- If the “ON/OFF” key is not released in time with switching off the TV, the TV has to be restarted manually. With the cursor down you can access the last 5 codes. With cursor UP you return to the search. As soon as the correct code is found, the code must be confirmed with the OK key.
- In order to interrupt the search mode, the “EXIT” key must be pressed for 2 seconds.
- At the end of the search mode, the remote returns to its original status.
- The remote flashes 5x at the end of the list.

4. *Code read-out (query-mode)*

To read-out an already programmed remote (code).

- Press the key (TV/atevio) on the remote (at least 3 seconds) till the LED flashes 2x.
- Enter the code 0 0 2. The LED flashes 2x to confirm the entry.
- In order to look for the first digit of the programmed code, the key “1” has to be pressed → the LED begins to flash. E.g. with a code of 356, the LED flashes 3x.
- To look for the second digit of the programmed code, the key “2” has to be pressed → the LED begins to flash. E.g. with a code of 356, the LED flashes 5x.
- To look for the third digit of the programmed code, the key “3” has to be pressed → the LED begins to flash. E.g. with a code of 356, the LED flashes 6x.
- There is no glow for 0.
- If during the programming for the duration of 5 seconds no key is pressed, the remote returns automatically to the default mode.


5. *Code read-out (query-mode)*

- Press the key (TV/atevio) on the remote (at least 3 seconds) till the LED flashes 2x.
- Enter the code 0 0 0.
- The LED flashes 2x to confirm the entry - the remote is restored into the default mode, STB (atevio) is active.
- TV mode without function (no code programmed).

Connections Diagram

1. Receiver to TV with Digital A/V Output


- Connect the satellite antenna cable to LNB IN.
- Connect the HDMI Cable to the HDMI Connector of the TV.
- Connect SPDIF to Digital audio input of the equipment(Digital Audio)

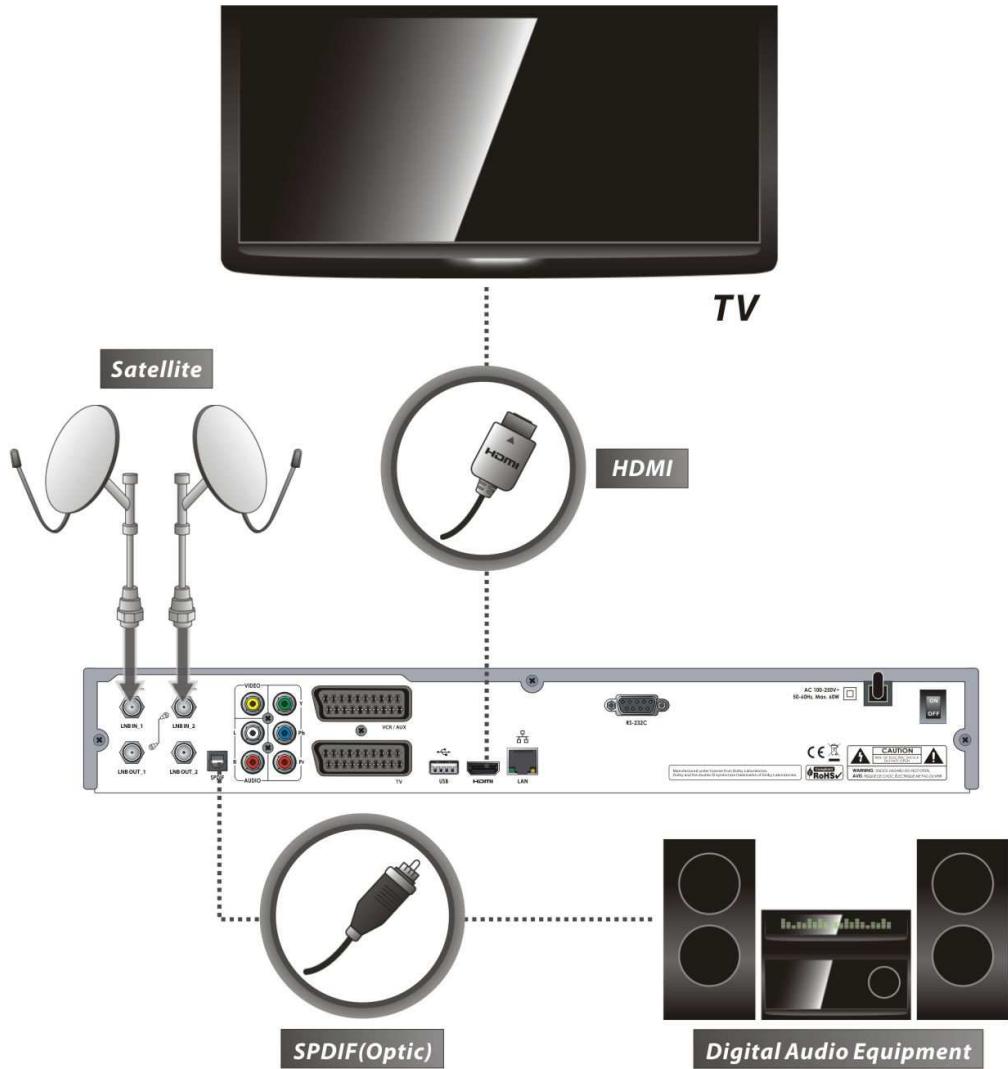

NOTE: Depending on the A/V equipment you own, there are various ways you can connect the STB. To choose the best connection option, please refer to the manual of the equipment you would like to connect to. To get High Definition playback of High Definition content, we recommend that you connect your high definition display with a HDMI cable. HDMI supports standard, enhanced or high-definition video and multichannel audio in a single cable.

2. Receiver to TV With Analog A/V Output

- Connect the satellite antenna cable to LNB IN.
- Connect the TV SCART to the SCART input of the TV.
- Connect the VCR SCART to the SCART input of the VCR.
- Connect the Component to the Component input of the TV.
- Connect the RCA to the RCA input of the TV.

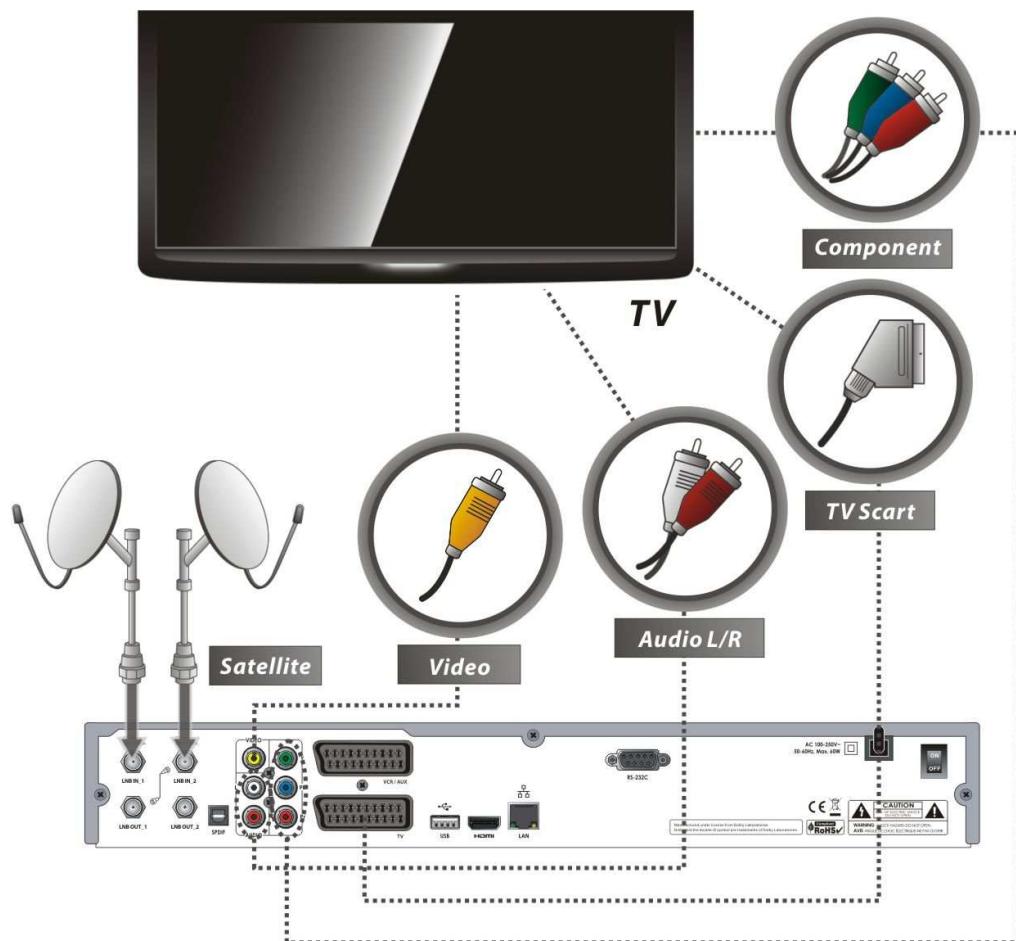

NOTE: The component connection (YPbPr) is recommended for Digital TV.


The SCART cable connection is recommended for analogue TV or VCR.

The composite connection (RCA cable) is recommended for analogue TV.

You cannot view high definition video with the SCART and the composite video connector.

3. Receiver to TV and VCR

- Connect the satellite antenna cable to LNB IN.
- Connect the TV SCART to the SCART input of the TV.
- Connect the VCR SCART to the SCART input of the VCR.

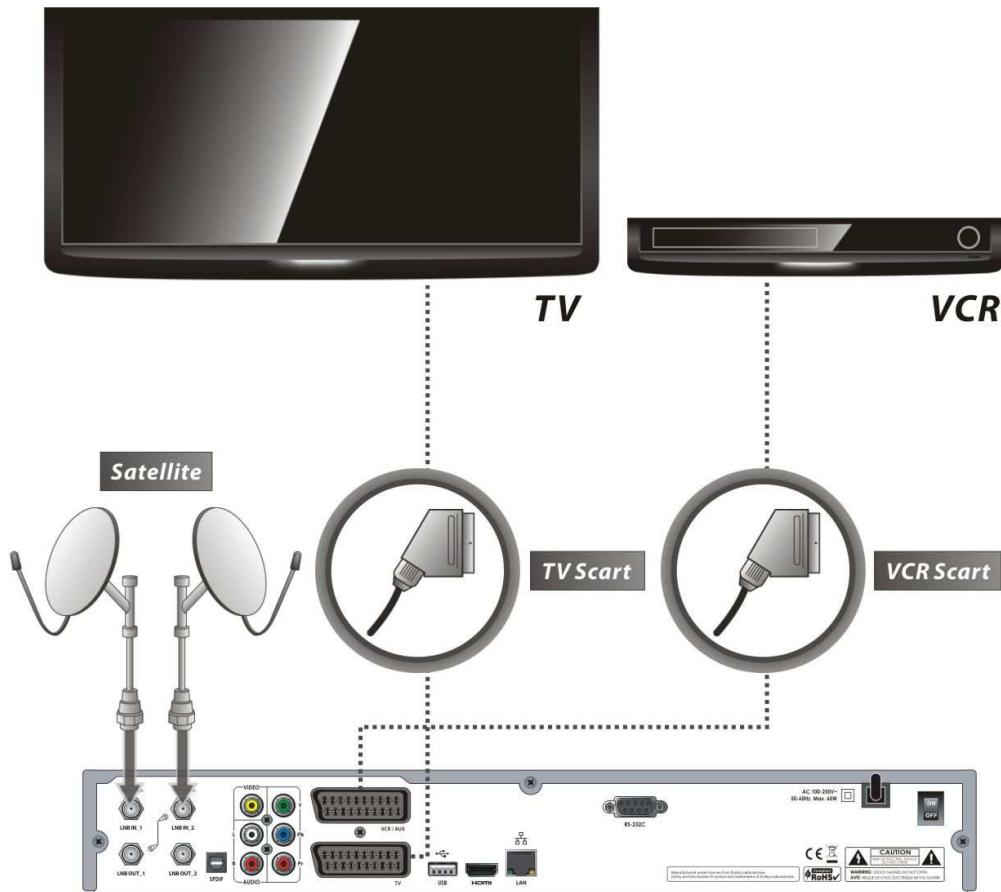

4. Connecting to Dish


4.1 Connecting one dish to both tuners by Loop through



4.2 Connecting each Dish to each Tuner



4.3 Connecting Antenna cable to each Tuner using DiSEqC SW (Recommend)

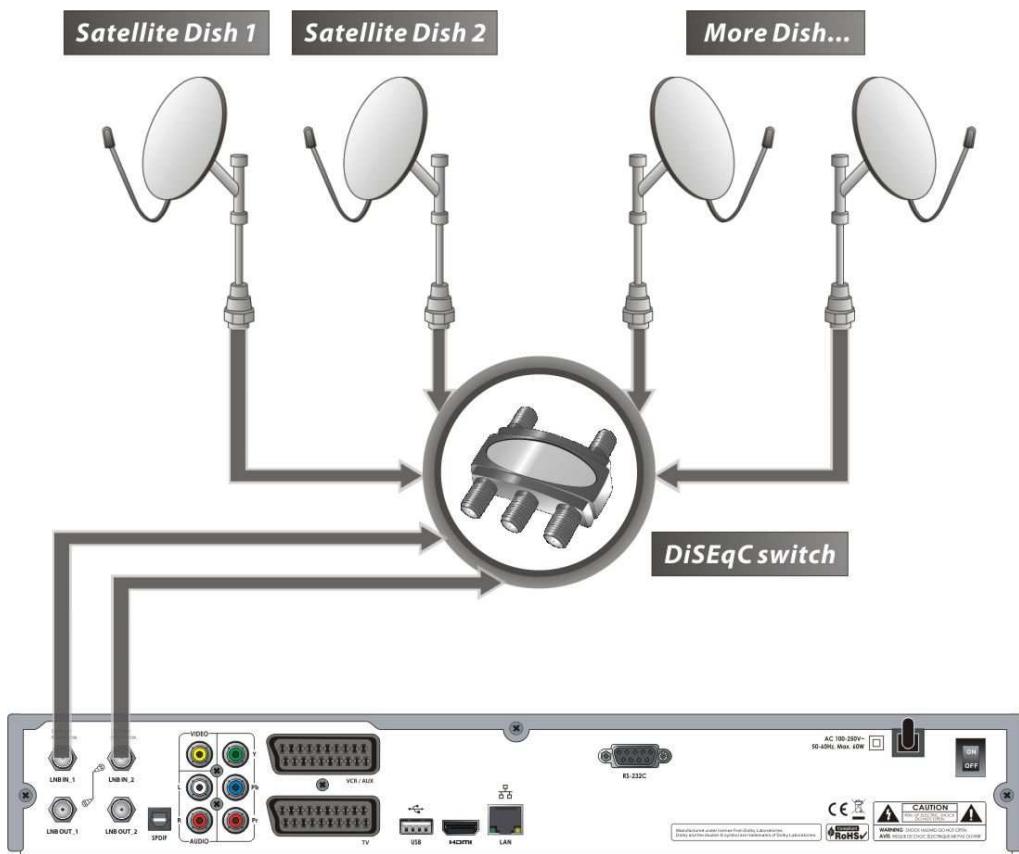

Guide of Functions

1. Selecting a Service

To select the desired service (channel), please refer to the instructions below.

1.1 Using CH UP/DOWN buttons

You can navigate between services by pressing **CH UP/DOWN** buttons. Whenever you press the **CH UP(DOWN)** button, current service will be changed to next/previous service. Please press **CH UP** or **CH DOWN** button until you fine the service you want to watch.

1.2 Using Service List

To select the desired service in the service list, you should firstly display the service list by pressing the **OK** button.

Use the **ARROW** buttons to select a desired service and press the **OK** button.

You can see that the service is changed in the small screen on the top-right.

To watch that service, press the **OK** button once more.

To watch the previous service, press the **EXIT** button.

In the Service List window, you can also select additional functions with the **COLOR** buttons.

Press the **RED** button, and you can sort the services by the Alphabet, Transponder(TP), Group, Tuner and CAS (Conditional Access System).

Press the **GREEN** button, and you can add the services to one of 10 Favorite List.

Press the **YELLOW** button, and you can search & find the service via a virtual keyboard.

Press the **BLUE** button, and you can adjust service list option.



NOTE: If you connect the tuner with a loop-through, you cannot use the sort list option.

1.3 Using Instant Service List

- If you press **NUMERIC** buttons or **UP/DOWN ARROW** button, instant service list will be displayed.
- Select the desired service by using the **ARROW** button, and press **OK** button to watch.
- You can also enter the service number directly by using the **NUMERIC** button.



1.4 Using Recent Service List

- To return to the previous service that you were watching, press **RECALL** button for a short time.
- To display recent service list, press the **RECALL** button for a little bit longer time.
- To chose the service from the recent service list, use the **ARROW** buttons to select, then press the **OK** button.
- Press **EXIT** button to exit from the recent service list.



2. Information Window

If you want to view the information of the current service that you are watching, press **INFO** button. Then the Information window will be displayed.

This Information window is automatically displayed when changing between the services. This window contains much useful information such as service number, service name, scrambled types of service, teletext, subtitle, Audio indication for Dolby Digital, Time duration of the service and so on.

By pressing **INFO** button once again, you can get more detailed information about the service.



3. Multi-Picture Display. (*)

Press the **BLUE** button to display multiple pictures and use the **RED** button to select the display options for 9 or 12 multiple pictures.

NOTE: () This feature will be supported later, by new s/w version by upgrading. Please refer to your local dealer / distributor.*



4. Electronic Program Guide (EPG)

Electronic Program Guide (EPG) allows you to see program schedule and program information from the service which includes this data as part of their transmission. Multiple services will be shown with a time line of programming events. The EPG supplies additional information of channel service, such as program listings, start/end times and detailed information about the program listings for all available services.

The availability and details of information of these program details can be varied, depending on the particular broadcasters, individual services.



- Press the **EPG** button, then the EPG menu will be displayed.
- Use the **ARROW** buttons to move to other services or to see previous/next guide.
- Press the **EPG** button once to view full EPG with multi service list, and press it twice to view the additional EPG information of a specific channel service. Keep pressing the EPG button to toggle between the full and detailed menus of EPG.
- Press the **GREEN** button to view next day EPG and the **RED** button to view EPG for a previous day.
- Select the program by using the **ARROW** buttons then set the event timer by pressing **OK**.
- You can schedule a recording with the EPG menu as follows.
 - Press **RECORD** button to schedule the event. This schedule can be checked in the menu of Timer Settings, in the System tool menu.
 - To cancel the schedule of the recording, press the **OK** button for the appointed event.
 - To edit the schedule of the recording, press the **RECORD** button for the appointed event.

5. Favorite Group

Select the **FAV** (Favorite) to view all favorite ten groups such as sports, movie, drama, satellite group and so on. Scroll through the various favorite group using the **ARROW** buttons, and select the desired favorite group by pressing **OK**.



6. Volume Control

- To adjust the audio volume, press the **VOL UP/ DOWN** buttons.
- Audio volume control bar will be displayed at the top of the screen and disappear after 4 seconds.
- When necessary, press the **MUTE** button to turn on/off the audio sound.

NOTE: The mute function remains set while you change services.



7. Pause

The **PAUSE** button is used to freeze the video. Press **PAUSE** button once more to resume the video.

8. Subtitle

You can select the language for a Subtitle, if the program provides subtitle information.

- Press the **SUBTITLE** button on your remote control unit.
- Select the desired subtitle language then press **OK** button.

- The subtitle will be displayed in the selected language at the bottom of the screen.
- To turn OFF the subtitle from the screen, Select ‘*Off*’ from the subtitle language list.

NOTE: When program does not provide subtitle information, SUBTITLE button is not active.


9. Audio Track

User can select the audio language list by pressing the **AUDIO (YELLOW)** button. Use the **ARROW** buttons to choose the preferred audio track from the list, then press **OK** to change. Multiple use of the **YELLOW** button toggles between additional menus



10. Teletext

When the **TELETEXT icon** on INFO Banner is appeared (Activated), Press the **TELETEXT** button to view the teletext information.

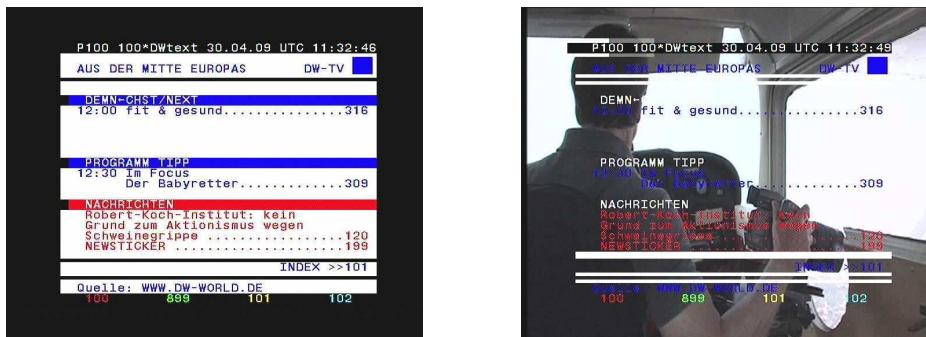

11. PIP (Picture in Picture)


- When you press the **PIP** button, a sub picture screen will appear on the main screen view. If you press the **PIP** button one more time, the primary picture and the sub picture will appear together side-by-side with the same size. The picture of the left side is the primary and the picture on the right side is sub. If you press the **PIP** button one more time, the sub picture will disappear.



- In the PIP mode, you can change primary and sub with the **PIP SWAP** button.



- If you press the **PAGE UP/DOWN** button, the location of the sub picture is changed.

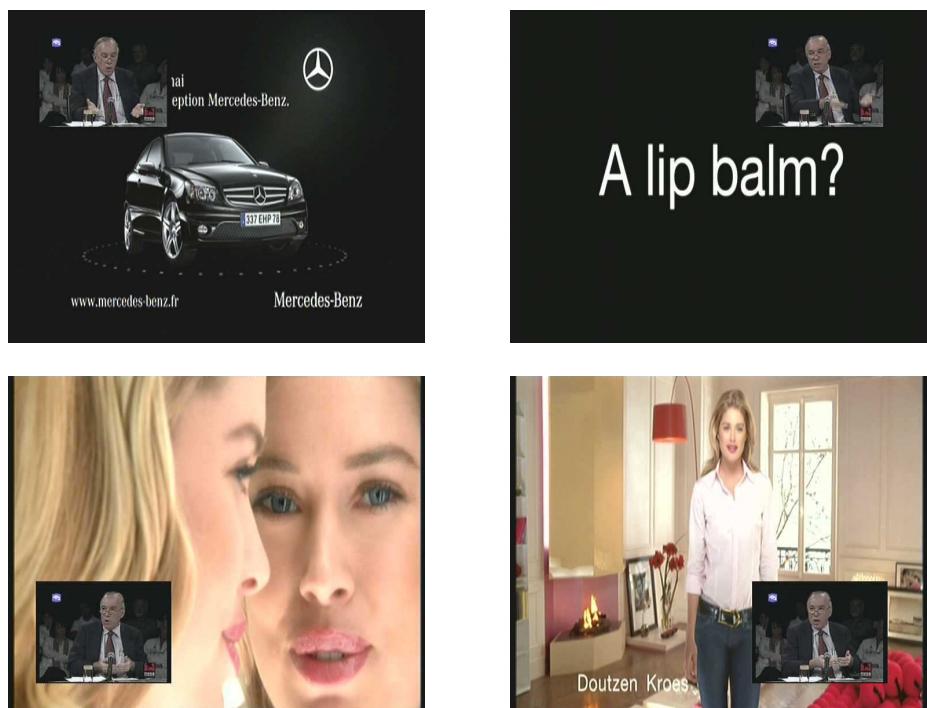

- If you press the **PIP SERVICE LIST** button, you can see the list of services of sub picture.

You can change the service of the sub picture from the service list shown.

NOTE: Changing services of sub the picture could be limited by the condition of the tuner connection or an ongoing recording event.



PVR (Personal Video Recorder) Function

1. Recording

You can select a recording storage device with the following sequence:

Menu > Configuration > Recording Option > Record Device.

Default is set to '**Hard Disk**'.

1.1 Recording methods

There are 3 type recording methods.

(Instant Recording / Time Scheduled Recording / Event Scheduled Recording).

● Instant Recording:

At anytime, you may press the **RECORD** button to start your recording instantly.



● Time Scheduled Recording:

- In Timer Settings menu, you may set the time & program to record your desired service program.

(Main Menu > System Tools > Timer Settings)



- Press the **GREEN** button to activate the new timer edit screen.

- In the Timer Edit screen, you may choose start date/time, duration, service, mode, type (Recording/Play), Tuner (Auto/1/2) then simply press the Yes button to schedule your recording event. Please note that the minimum offset time of 3 minutes is required from the Start time & current time for appropriate recording process to take place.



- **Event Scheduled Recording via EPG:**

In the EPG menu screen, you can choose the event you wish to schedule or record.

- While watching the LIVE TV screen, press the **EPG** button to access the EPG menu screen.



- Go to the event which you wish to view at the time indicated on the EPG schedule, then press **OK**. The event will be scheduled with the **BLUE play icon**. This BLUE play icon means that you want to just watch the event at the scheduled time.



- Press the **OK** button one more time, then the event will be scheduled with the **RED dot icon**. This RED dot icon means that you want to record the event at the scheduled time.



- When you set an event for scheduled recording via the EPG menu. It automatically sets a Timer Event in the **Main Menu > System Tools > Timer Settings**.



1.2 Recording Edit

Press the **REC** button while recording to see the recording message window.

- **Pause:** Select **Pause Recording** then press **OK** to pause the current recording process.
- **Duration:** Set recording duration. Press **LEFT/RIGHT ARROW** button to change recording duration.
- **Stop Position:**

Set the finishing time of recording.

- **End of current event:** finish recording at the end of current event
- **End of next event:** finish recording at the end of next event.
- **Not Available:** EPG is not available.



- **Record Slot:** When you are recording 2 services, you can set Primary / Secondary with **Left/Right ARROW** button. Press **OK** button to go to the recording service.



1.3 Long Time recording

During lengthy time recording processes of 4GB(Giga Byte) or more, additional files may be created per every 4GB. (For example; aaa.ts, aaa.ts1, aaa.ts2... and so on).

You must remember not to erase any of duplicated file. These files are only able to be viewed with your PC not with the receiver (STB).

1.4 Pause during recording

- When the **PAUSE** button is pressed during recording, only the live video is paused, but recording is continued at the selected recording device.

(*Menu > Configuration > Recording Option > Record Device*)

- Press **PAUSE** button once again and event will resume from the pause time.



- During recording, press the **PLAY/TIMESHIFT** button to show the Play bar screen.



- While the Play bar is shown on your screen, you may use the **LEFT/RIGHT ARROW** button to move (forward & backward) freely within recorded time.



- If you press the **STOP** button, it will go to LIVE and you may press **PREV FILE** button to view the recorded file from the beginning.

- When recording 2 services at the same time, Press the **STOP** button to see a message window of current recording status / information.

If you select one of the 2 recordings and press the **OK** button, that recording service will be stopped.

If you press the **STOP** button during recording 1 service, the recording will be stopped.



NOTE: Dual Recording

STB can record up to two different services simultaneously. Time shifting is also a recording, so Time shifting will be possible on one of the two recordings during dual recording.

2. Time Shifting

You can select a storage device for a temporary file of the Time shifting with the following sequence:


Menu > Configuration > Recording Option > TimeShift Device.

Default storage device is set to '**Hard Disk (SATA)**'

- If pressing the **PAUSE** button during Time shift, the live video is paused but the temporary recording for time shift is continued at the selected storage device.



- Press the **PAUSE** button once again, then the event will resume from the paused time.

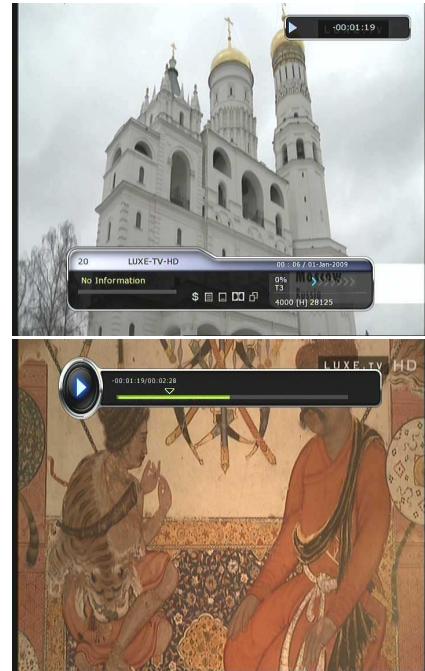

- While watching live TV, press the **PLAY/TIMESHIFT** button to show the play bar on your screen.

- When the play bar is displayed on your screen, you may use the **LEFT/RIGHT ARROW** buttons to move freely through the recorded times bar.

- If you press the **STOP** button while time-shifting, the screen will be turned to a live TV channel. You can also use **PREV FILE** button to move to a start location of the Time-shifted file.



3. Playback (Play List)

You can playback many files with the Playlist which you access by the **PLAYLIST** button. In the Playlist, you can check and playback recorded files, multimedia movie files, MP3 music files, and image files. With the **LEFT/RIGHT ARROW** button, go to the Recorded Files, Imported Files, Music and Photo category and check & for playback files in each category. Press the **RIGHT ARROW** button once to go to Imported Files, press the **RIGHT ARROW** button one more time to go to the Music menu and press the **RIGHT ARROW** button one more time to go to the Photo menu.

3.1 Recorded Files

- To enter Recorded Files menu, press the **PLAY LIST** button.
- Locate the recorded file(s) you wish to play with the **UP/DOWN** button and press the **OK** button to playback the recorded file(s).
- To choose a particular selection of files, select a desired file and press the **RED** button. Press the **OK** button to begin the selected files.



- **Select Device :** Press **PLAYLIST** button one more time in the Playlist mode to see “Select Device” window, and select the device which has the file you want to play.

NOTE: “Select Device” window shows devices which are currently connected to the STB.



- **Sorting:** If you press the **YELLOW** button, you can sort the files by Time / Name / Size.




- **File Option:** If you press the **BLUE** button, you can delete or move files, make a folder, rename in File Option. You can select multiple files together and delete or move all of them at once.



3.2 Imported Files

- If you press **RIGHT ARROW** button in Recorded Files, you can go to Imported File menu.
- Locate the file(s) you wish to play with the **UP/DOWN** button and press the **OK** button to enjoy the movie.
- To choose a particular selection of files, select a desired file and press the **RED** button. Press the **OK** button to begin the selected files.
- You can use the same ‘Select Device’, ‘Sorting’ and ‘File Option’ features as in the Recorded Files.

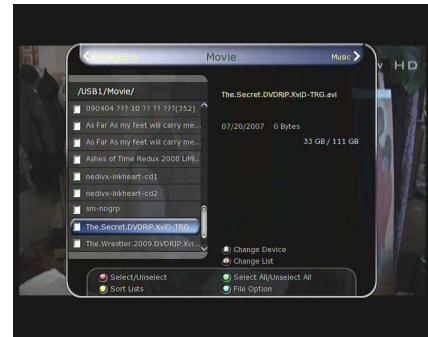

3.3 Music

- If you press the **RIGHT ARROW** button in Imported Files, you can go to Music menu.
- If you press the **RECALL** button, you can enjoy music with Shuffle playback and repeat.
- You can use the same ‘Select Device’, ‘Sorting’ and ‘File Option’ features as in the Recorded Files.



3.4 Photo

- If you press the **RIGHT ARROW** button in Music, you can go to the Image Photo menu.
- If you press the **RED** button or **OK** button, you can start the slide show of image files. Press the **EXIT** button to stop slide show.
- If you press the **GREEN** button, you can adjust the Slide Time, Repetition, Title, Down-scale.
- You can use the same ‘Select Device’, ‘Sorting’ and ‘File Option’ features as in the Recorded Files.




4. Bookmark


- When the Play bar is displayed, you may move to desired time and book mark it by pressing the **RED** button. Bookmark(s) are indicated with a Green line on the play bar. Also, you may press the **RED** button to activate the play bar to mark your bookmark(s).



- When the play bar is on, user can move / jump between the bookmarks by pressing the **GREEN** button.

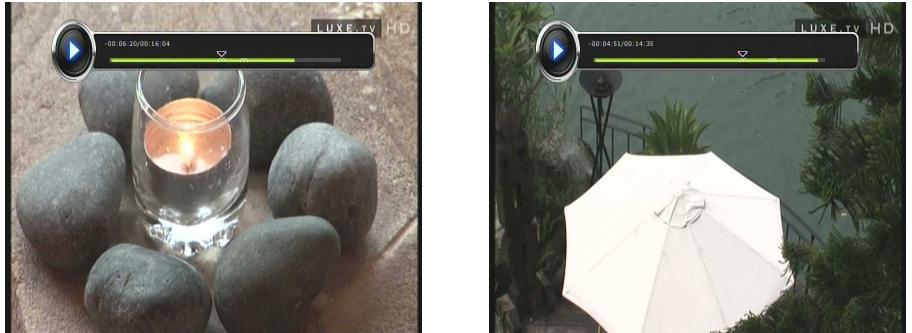

- If you wish to delete any Bookmarks, go to that bookmark by pressing the **GREEN** button, then press the **RED** button to delete the current bookmarks.

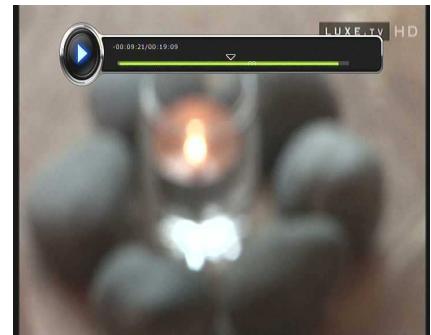

5. Trick mode

- The user can change the speed of a fast forward play with **FF** (Fast Forward) button. Press **FF** button to change the speed to x2, x3, x4, and x5. If you once again press **FF** button in its x5 mode, it returns to normal(x1) speed play.
- You can also change rewind speed with the **REWIND** button. Press **REWIND** button to change the speed to x2, x3, x4, and x5. If you press the **REWIND** button again in it is at the x5 mode, it returns to normal speed.
- You may press the **PAUSE** button at any time to pause a pre-recorded event. Press the **PAUSE** button once again to resume play of the recorded event.



Menu Map

<i>Main Menu</i>	
 <i>System Tools</i>	<ol style="list-style-type: none">1. Storage Manager2. Timer Settings3. Service List Manager4. Data Transfer
 <i>Configuration</i>	<ol style="list-style-type: none">1. Recording Option2. Parental Control3. Display Setting4. Time Setting5. Language Setting6. A/V Output Setting
 <i>Installation</i>	<ol style="list-style-type: none">1. Dish Setting2. Positioner Setting3. Service Search4. Network Setting5. System Recovery6. System Information
 <i>Utilities</i>	<ol style="list-style-type: none">1. Calculator2. Calendar3. CAS

Main Menu of Guide

To display the menu, press the **MENU** button at any time. You can select the sub menus by using the **ARROW** buttons.

The selected sub menu becomes highlighted. After selecting (highlighting) the sub menu you want to access, press the **OK** button. If you want to return to the previous menu, press the **MENU** button. And if you want to exit from the menu, press the **EXIT** button.



1. System Tools

1.1 Storage Manager

The items in this menu allow you to access and control the storage devices that you want.

- **Current Device:** Select the storage device you want to access with the **ARROW/OK** buttons.
- **Status:** You can see the information of current connected devices, such as '**Mounted**', '**Not Available**'
- **File System:** It shows the file system of the current device. You can also select desired file system that you want when you format the device.

NOTE: You must select FAT32 file system, if you want to access the USB storage devices in Windows



- **Total:** Displays total size of current device.
- **Free:** Displays free size of current device.
- **Format:** If you press the **OK** button to format current device, the device will be formatted with above file system.

NOTE: When file system is 'Unknown', the device will be formatted with 'Journaled'.

- **Play List:** Press **OK** button to move to 'Play List' menu directly.

1.2 Timer Settings

Insert a new timer entry or modify an existing timer entry.

- **To add new timer entry:** Press the **GREEN** button. Timer Edit window will popup. You can set the specific start date, time, duration and service for its reservation. And you can choose one of Timer Modes as '**Once**' or '**Daily**' or '**Weekly**'. You can choose timer operation type as '**Recording**' or just to '**Play**'.
 - If you choose '**Recording**', it will start recording at that time.
 - If you choose '**Play**', it will change and tune to the service that you wish to watch.
- **To modify existing timer entry:** Choose the timer entry which you wish to modify and press the **OK** button.
- **To delete an existing timer entry:** Choose the timer entry that you want to delete and press the **RED** button.



NOTE: If you reserve one or more event through the EPG menu, the reserved event(s) will be added to Timer Settings automatically.

1.3 Service List Manager

Service List Manager menu will appear when you press the **OK** button.
You can select Edit Mode by pressing the **YELLOW** button.

- Lock Services:** All service lists will be shown on the left side of the window, the middle will show the list of service to be locked. By using the **ARROW** and **OK** buttons, you may move the chosen service to the middle window to lock that service. Services can also be moved back from the middle to the left side to un-lock them.



- Move Services:** All service lists will be shown on left side of the window, services to be moved will be shown on the middle window. Move the service to the middle window by using the **ARROW** and **OK** buttons, then the middle window service will be moved to a specified location when the desired location is selected from the left window.



- Delete Services:** All service lists will be shown on left side of the window. By using the **ARROW** and **OK** buttons you may select services to be deleted by placing them in the middle window. Then press the **GREEN** button to delete the selected services.



- Skip Services:** All services will be shown on left side of the window, the middle window will only show the services that are chosen to be skipped. By using the **ARROW** and **OK** buttons you may move the selected services from the left to middle window to skip them.



- **Set Favorite Services:** Use the **ARROW** and **OK** buttons to select your desired favorite group. Once, favorite group is chosen, the left side window will show all service lists and the middle window will only show the selected services of the favorite group selected. By using the **ARROW** and **OK** buttons, you may **ADD** the desired services to a favorite group or **DELETE** any from the favorite group. The name of the favorite group can be edited by pressing the **GREEN** button.



- **Edit Services:** All service names will be shown on the left side of the window. Move the highlighted bar to the service where you want to edit its name and press the **OK** button. Then you will see the virtual keyboard. Using the **ARROW** and **OK** buttons, you can edit the name of the service with the keyboard.



1.4 Data Transfer

When the data transfer task is in process, the Front USB slot is set to a default device slot. But, if no USB device is connected on a front USB slot, then the Rear USB slot is set as a device to be used for the data transfer process.

NOTE: If no USB device is connected on either two (Front & Rear) USB slots, then a Menu item will not be available.

- **Transfer all System data to USB storage:** If you want to transfer and use BOTH of the current system parameters and service data in the future, this menu will allow you to store all data to your USB device. Press **OK** button to store all current data to an external USB storage.
- **Transfer Service data to USB storage:** If you want to transfer and use ONLY the service data in the future, this menu allows you to store current service data. Press the **OK** button to store the current service data to your external USB storage. The service data can also be viewed and edited on a PC with an appropriate editor (DrEdit) for the file saved.
- **Data download from USB storage device:** This menu allows you to download the saved data from the external USB storage to your STB. Press **OK** button to download data.



2. Configuration

2.1 Recording Option

- Confirmation message when ‘stopping’ your Recording process :
 - **Set ‘On’:** When you press the **STOP** button while recording, then a confirmation window is displayed.
 - **Set ‘Off’:** When you press the **STOP** button while recording, the STB will stop the recording process immediately / instantly with no extra confirmation message.
- **Extra Event Recording:**

You can add an extra recording time(**1 Min/2 Min/3 Min/4 Min/5 Min/10 Min/15 Min/off**) to scheduled recording events.

If you set an extra recording time by using the **ARROW** and **OK** buttons, the scheduled recording event will have a ‘Start’ and ‘End’ time of additional recording time added to the basic event. This option only works for real time events. But, when you schedule a service recording in the Timer Settings menu, this option has no affect.

- **Time-Shift:**

You can adjust the time-shift in 30 minute intervals.

(**30 Min/60 Min/90 Min/120 Min**)

When selected, time shifting function works automatically up to the limit of time that you set, as long as the Time-Shift storage device has enough memory space. If you set this option to ‘OFF’ status, then the time shifting function never works.

- **Time-Shift Device:**

You can select the Time-Shift Device you want, such as Hard Disk / USB1(Front) / USB2(Rear).

- **Record Device:**

You can also set a Recording Device which you want to use, such as the Hard Disk / USB1(Front) / USB2(Rear). Recorded files are stored in the device you set.



2.2 Parental Control

User’s access rights to a service and programs are controlled by a 4-digit secret code that is defined by the user. Whenever you attempt to access the parental control menu, a pop-up window will ask you to input a PIN code. (If necessary, you can change it.)

NOTE: The default PIN code is ‘0000’

- **Censorship:** Set the parental guidance rating of highlighted censorship classification. The parental level is given as an age-based number.
- **Change Pin code:** To change your PIN code, input the new PIN code using the **NUMERICAL** buttons. To verify the new PIN code, input the new PIN code again.
- **System:** Set the access rights to the System menu.
- **Installation:** Set the access rights to the Installation menu.
- **Configuration:** Set the access rights to the Configuration menu.
- **Edit Service:** Set the access rights to the Edit menu.



2.3 Display Setting

- **Info Box position:** Set a position of the information window.
- **Info Box Display Time:** Set the time duration of the information window being displayed on the screen after changing services.
- **Volume Bar Display Time:** Set the time duration of the volume bar being displayed on the screen after changing audio volumes.
- **EPG Time Range:** You can set the time range in hours which is displayed for a program in the EPG window.
- **Zapping Mode:** You can set the zapping mode as follows (zapping mode is when changing services).
 - **Black screen:** Display a black screen when changing between services.
 - **Freeze:** Display the last still picture when changing services.
- **Front Display Scroll:** You can set how the VFD Display Scrolls.
 - **On:** Continually scroll the service name, if the letters of the service name is over 12 characters.
 - **Off:** Scroll service name once, if the letters of the service name is over 12 characters.
- **Front LED Lighting Time:** You can adjust the lighting time of the front LED.
- **Front LED Brightness:** You can adjust brightness of the front LED with 4 steps. By setting ‘off’ this option, will turn off the front LED lighting.



2.4 Time Setting

- **Time Setting:** To set the current time, you can use two modes; **Auto** or **Manual**.
 - **Auto Time Setting**
Local Offset: Enter the offset value by using the standardized information of current service area.
Daylight Saving: If you want to apply daylight saving, select the counter by using the **ARROW** buttons.
 - **Manual Time Setting**
Date: Enter the calendar date by using **ARROW** buttons then press the **OK** button to finish.
Time: Enter the time by using the **NUMERIC** buttons.
- **Clock Mode:** Select the type of clock display(12 Hours or 24 Hours) using **ARROW** buttons.
- **Wake Up Mode:** Enter the time for the receiver to automatically power **ON**. And you can choose one of Wake Up Mode as ‘off’ or ‘Once’ or ‘Daily’ or ‘Weekly’.
 - **Wake Up Date:** Select the date when the STB is turn on. Press the **OK** button to display calendar.
 - **Wake Up Days:** Select a day of the week when the STB is turn on.
 - **Wake Up Time:** Enter the wake up time of the STB using the **NUMERIC** buttons.
 - **Wake Up Service:** Select the service when the STB is turn on. Press the **OK** button to display the service list.
- **Sleep Mode:** Enter the time for the receiver to automatically switch **OFF** and go to standby mode. And you can choose one of the Wake Up Mode as ‘off’ or ‘Once’ or ‘Daily’ or ‘Weekly’.
 - **Sleep Date:** Select the date when the STB is turn off. Press the **OK** button to display the calendar.
 - **Sleep Days:** Select a day of the week when STB is turn off.
 - **Sleep Time:** Enter the turn-off time of the STB using the **NUMERIC** buttons.



2.5 Language Setting

- **Menu Language:** Select the desired menu language by using the **ARROW** buttons.

NOTE: The menu and operation languages can be changed depending on the country sold. Available languages are subject to change without prior notice.

Audio Language: Select the default language for the audio when changing services. If no other language is provided, then the default language of current will be automatically selected.

- **Subtitle Language:** Select the default language for subtitle when changing service.



2.6 A/V Output Setting

- **TV Type:** Select the TV types.(**PAL/NTSC/Auto**) In Auto mode, the STB is automatically selected to NTSC or PAL accordingly to the service played.
- **TV Aspect Ratio:** Select the aspect ratio of TV which is connected to the STB (4:3/16:9). This menu must be set prior to selecting the Display Format function.
- **Display Resolution:** Select the Display Resolution of the screen by using **ARROW** or **OK** button. You can also change the resolution with **576/1080** button in the remote. Each time you press the **576/1080** button, the resolution changes in the following sequence: **576i > 576p > 720p > 1080i**



NOTE: Please note that your TV may not show a picture depending on the Display Resolution set by your STB as well as if set to PAL when NTSC is required or vice versa. If you set the Display Resolution as SD (576i), your TV cannot display anything when the TV is connected to the Component Video (YPbPr). If you set the Display Resolution as HD (more than 576p), your TV cannot display anything when the TV is connected to the SCART or Composite Video output of the STB. In case of HDMI, your TV can display a picture for all of the resolution settings of the STB. But it is also possible that your TV may not display a picture with 576i, because some HDTV's does not support 576i.

- **Display Format:**

In case of a 4:3 ratio TV set, you can select **Letter Box** or **Pan&Scan**. In case of a 16:9 ratio TV set, you can select **Pillar Box** or **Full Screen**.

- **16:9 Display format on 4:3 TV set**

Letter Box: You can see the full screen of 16:9, but top and bottom edges of your TV screen display black horizontal Pillars.

Pan&Scan : The picture is displayed in full on your 4:3 TV screen, but left and right sides of the original picture cannot be displayed.

- **4:3 Display format on 16:9 TV set**

Pillar Box: You can see the full screen of 4:3, but left and right sides of your TV screen display black vertical Pillars. 4:3

Full Screen: The picture is displayed in full on your 16:9 TV screen, but left and right sides of the original picture is displayed with widening of the screen from left and right. Because of the artificial widening, the TV picture will be distorted.

- **Video Output Mode:** According to Display Resolution, you can select the **Video Output Mode**.

- **In case of More than 576p (HD):** The 'RGB' output will be disabled automatically. You can select Video Output Mode (**CVBS, YPbPr, YC**).

- **In case of 576i (SD):** The 'YPbPr' output will be disabled automatically. You can select Video Output Mode (**CVBS, RGB, YC**).

- **Sound Mode:** Set the audio mode output among the RCA jack, optical SPDIF and HDMI.(**Stereo/Mono/Left/Right**).

3. Installation

3.1 Dish Setting

Select the satellite/antenna and LNB settings for service search. The values that are set in this menu will be available for selection in other service searching menus.

- **Satellite:** Select the satellite which you want to do a search for.
 - Press the **LEFT/RIGHT ARROW** button to select the satellite.
 - If you press the **OK** button, the entire satellite list will be displayed.
 - Select the desired satellite name to search.
 - If the desired satellite name is not listed then select User Defined.



- **Tuner Connection:** You can set connection type between Tuner and LNB.

- **Separate:** Set the connection type option to '**Separate**', if each of the tuners are connected to different LNBs (**LNB IN_1 / LNB IN_2**) individually / independently.

This Separate connection is used, when each two tuners are connected to different LNBs. Due the independent & separate connections between two Tuners & LNBs, user can watch all the services scanned by one tuner (1), while the other tuner (2) is set for recording at the same time.

- **Loop-Through:** Set the connection type option to '**Loop-Through**', if you have connected the **LNB OUT_1** and **LNB IN_2** with a loop-through cable. In this case, you would have some limitations in using some features such as dual recording.

This connection is used when the Tuner (1) is connected with LNB output, and the Loop-through output of the Tuner (1) is connected with input of the Tuner (2). This is the way to use & activate both tuners when you have only 1 LNB with your dish antenna. However, this will limit the possible tuning range (Satellite & Polarization) of the 2nd tuner, while the 1st tuner is being used for its recording process (because the input signal of 2nd tuner is dependent of the signal which the 1st tuner is tuned to).

NOTE: User should make the appropriate connection by choosing the right tuner connections between the Loop-Through and Separate connections. Due to the difference of these two connections, wrong LNB and Tuner connection may cause the loss of signal reception. We strongly recommend the use of professional service personnel to make this installation and connection if your knowledge is limited.

- **Tuner:** Select the tuner which you want to set (**Tuner 1/ Tuner 2**). If you set '**Loop-Through**' on the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be disabled automatically.
- **Frequency:** Select the satellite frequency which you want to use for checking the signal.
- **LNB Power:** Select the LNB power on or off.
- **LNB Type:** Select the LNB type.
- **LNB Frequency:** Select the local oscillator (L.O.) frequency that is specified for the LNB used..
 - Use the **LEFT/RIGHT ARROW** buttons to select the LNB frequency.
 - If the required LNB frequency is not listed, then enter the frequency manually using the **NUMERIC** buttons.
 - When you select Universal LNB type, both 9750 and 10600 are supported at the same time. And then the LNB 22KHz setting is disabled.
- **LNB 22KHz:** When you use a separate coax 22 KHz tone switch box, make the 22 KHz tone switch enabled or disabled to select the input you desire of the tone switch.
- **DiSEqC Switch:** If you use **DiSEqC 1.0** or **DiSEqC 1.1** switch, select one of the DiSEqC inputs.
- **Service Search:** Press the **OK** button to move to the Search Menu

3.2 Positioner Setting

- **Satellite:** Select the satellite which you want to search for the Service.
 - Press the **LEFT/RIGHT ARROW** button to select the satellite.
 - If you press the **OK** button, a complete satellite list will be displayed.
 - Select the wanted satellite name.
 - If the desired satellite name is not listed then select User Defined.
- **Tuner:** Select tuner that you want to set (**Tuner 1/ Tuner 2**). If you have set '**Loop-Through**' in the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be automatically disabled.
- **Frequency:** Select the satellite frequency you want to use to check for a signal.
- **Positioner:** Select the positioner.
 - **None : (No Positioner)**
 - **Using DiSEqC 1.2:**
 - Move :** To move the dish, press **LEFT/RIGHT** button.
 - Fine Move:** To move the dish in smaller steps, press the **LEFT/RIGHT ARROW** button.
 - Step:** Set to positioner moving steps as 1, 2, 3, 4
 - Positioner Command:** To use various positioner commands, press the **OK** button. Then, available positioner commands will appear.
 - **Using USALS:**
 - Move:** To move the dish, press the **LEFT/RIGHT** button.
 - Fine Move:** To move the dish in smaller steps,, press the **LEFT/RIGHT ARROW** button.
 - Step:** Set to positioner moving steps as 1, 2, 3, 4
 - Dish Longitude:** Enter the longitude position of the antenna using the **NUMERIC** buttons.
 - Dish Latitude:** Enter the latitude using the **NUMERIC** buttons.
 - Go To:** Press the **OK** button to rotate the dish to the selected antenna position.
- **Dish Setting:** Press the **OK** button to move to *Dish Setting* menu directly.
- **Service Search:** Press the **OK** button to move to *Service Search* menu directly.



3.3 Service Search

You can select the following search mode.

- **Auto Search Mode:**
 - **Satellite:** Press the **OK** button to select the target satellite to be searched.
 - **Tuner:** Select tuner what you want to set (**Tuner 1/ Tuner 2**). If you set '**Loop-Through**' on the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be automatically disabled.
 - **Search Typ:** Select the search type.
 - **Network Search:** You can select Off or On. When you select '**On**', you can find more transponders using the home network. As it refers to NIT during searching, if there is the frequency information of other transponder, it searches the other transponder besides the transponder that the user inputs.
 - **Dish Setting:** Press the **OK** button to move to Dish Setting menu directly.
 - **Positioner Setting:** Press the **OK** button to move to the Positioner Setting menu directly.
 - **Start Search:** Press the **OK** button to start search.



● Manual Search Mode :

- **Satellite:** Press the **OK** button to select the target satellite for search.
- **Tuner:** Select the tuner which you want to use (**Tuner 1/ Tuner 2**). If you set '**Loop-Through**' on the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be automatically disabled.
- **Frequency:** Select the frequency from the list to search.
- **Symbol rate:** Enter the symbol rate using the **NUMERIC** buttons.
- **Polarity:** Select the polarity. (**Vertical/Horizontal**)
- **Search Typ:** Select the search type.
- **Network Search:** You can select Off or On. When you select 'On', you can find more transponders using the home network. As it refers to NIT during searching, if there is the frequency information of other transponder, it searches the other transponder besides the transponder that the user inputs.
- **Dish Setting:** Press the **OK** button to move to the Dish Setting menu directly.
- **Start Search:** Press the **OK** button to start a search



● Blind Search Mode:

- **Satellite:** Press the **OK** button to select multiple satellites.
- **Tuner:** Select the tuner which you want to set (**Tuner 1/ Tuner 2**). If you set '**Loop-Through**' on the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be automatically disabled.
- **Frequency:** Set **Auto** to search whole frequency, Set **Manual** to search only desired frequency.
- **Polarity:** Select the polarity. (**All Polarity/Vertical/ Horizontal**)
- **Search Type:** Select the search type.
- **Dish Setting:** Press the **OK** button to move to the Dish Setting menu directly.
- **Start Search:** Press the **OK** button to start a search.



● Advanced Search Mode:

- **Satellite:** Press the **OK** button to select the target satellite for search.
- **Tuner:** Select the tuner which you want to set (**Tuner 1/ Tuner 2**). If you set '**Loop-Through**' on the menu (*Installation-Dish Setting-Tuner Connection*), this menu (Tuner) will be automatically disabled.
- **Frequency:** Select the frequency from the list to search.
- **Symbol rate:** Enter the symbol rate by using the **NUMERIC** buttons.
- **Polarity:** Select the polarity. (**Vertical/Horizontal**)
- **Video PID:** Enter the video PID using the **NUMERIC** buttons.
- **Audio PID:** Enter the audio PID using the **NUMERIC** buttons.
- **PCR PID:** Enter the PCR PID using the **NUMERIC** buttons.
- **Start Search:** Press the **OK** button to start a search.



3.4 Network Setting

To use a Network connected to the STB Ethernet port, you have to prepare the STB Network settings. When the STB and a PC are connected via a network, you can access the files of the STB storage device such as the SATA Hard Disk Drive (HDD) or USB storage device.


NOTE: If you use DHCP function of router, you can set easily network configuration.



- **DHCP:** You can select ***On/Off*** for the Dynamic Host Configuration Protocol (DHCP) to get the all configuration from the router.
 - **If you select ‘On’:** You will obtain the configuration from network and be set up automatically. In this case, the remaining item (**IP Address**, **Subnet Mask**, **Gateway**, **First DNS**, **Second DNS**) are automatically set and you don’t have to configure them manually.
 - **If you select ‘Off’:** You have to input the IP address manually together with the following data.
- **IP Address, Subnet Mask, Gateway, First DNS, Second DNS:** You can input the address with the **OK** button, **NUMERIC** buttons and the **LEFT/RIGHT** buttons. You can move to the next item of Subnet Mask with the **DOWN** button and you can configure the other items in the same way.
- **Firmware Upgrade Server:** This feature is not supported for the time being. It will be available in the future.
- **MAC Address:** This will display the MAC address of the STB Ethernet interface and is a fixed assignment unique to each STB.
- **Control of the files via the network and your PC.**
 - Check the IP Address of the STB on the Network Setting menu.
 - Press Enter button on your PC, after writing IP Address on the web browser address line.
Ex.) //168.158.10.146/storage
 - You can see the folder name of HDD, USB1 and USB2 in the Storage folder.

HDD: SATA HDD (internal HDD or external-SATA)
USBI: Front USB Storage Device
USB2: Rear USB Storage Device

 - You may be able to load and retrieve data between the PC and the STB via the browser

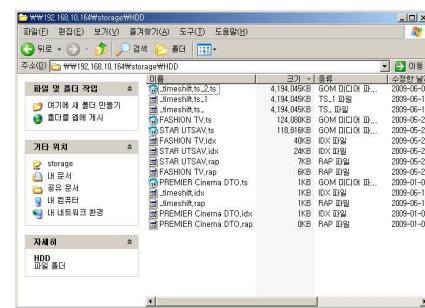

W-LAN Netzwerkeinstellungen


Switch off the receiver and plug in the W-LAN stick in one of the free USB slots.
Now start the Atevio.




In the menu Installation – Network settings - you should be able to choose between Ethernet and W-LAN.




In the above mentioned menu change the connection type to W-LAN.

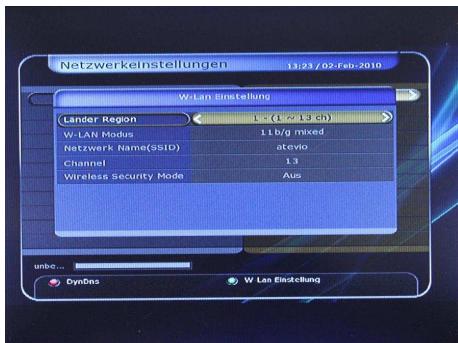

Push the green button to modify the W-LAN settings.
 Adjust the SSID according to your Network.
 If you choose channel 0, the channel will automatically be assigned.
 For the Wireless Security Mode you have the options of: Off, WEP, WPA.

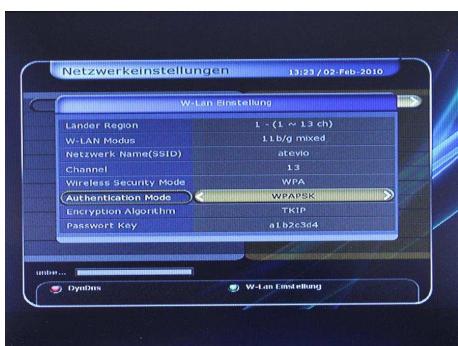


This example shows the security Mode WPA with the Authentication Mode WPAPSK.
 The Encryption Algorithm is TKIP.
 With Authentication Mode WPA2PSK the Encryption Algorithm is EAS.

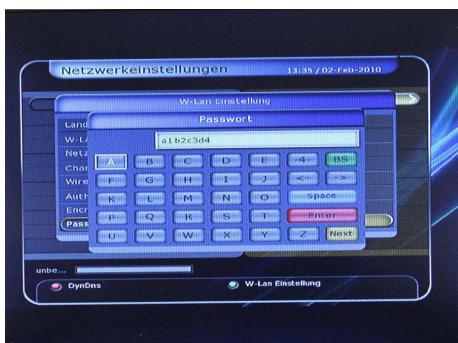


Pushing the button OK allows you to modify the SSID and the Password Key.
 In this case the Password is a1b2c3d4.
 You have to set the password of your router.
 Confirm your input with the red button and leave the W-LAN settings when you are finish with exit.



If DHCP is turned on the receiver searches automatically the Network Information.
 This takes some seconds.

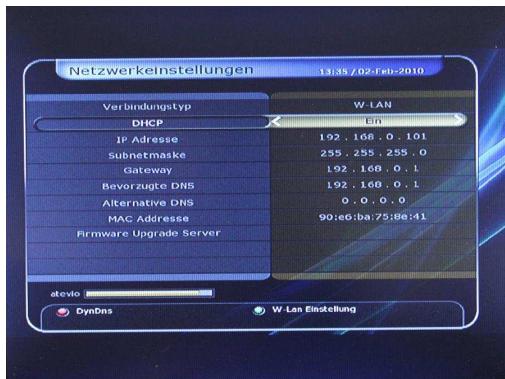

The IP Address is assigned when the settings are made correctly.
The yellow bar displays the signal strength.
Beside this, you can see the connected SSID.

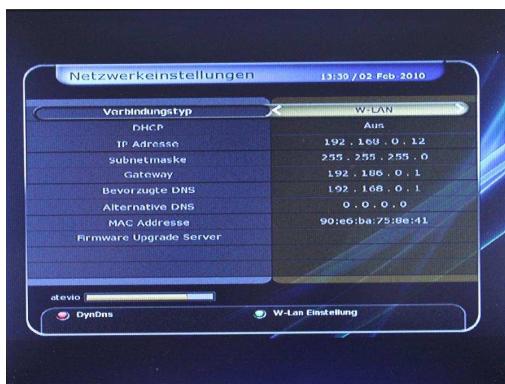

If you prefer a static IP Address, turn DHCP off.
Set the desired IP Address, Subnet Mask, Gateway (IP of your Router) and the First DNS by yourself.

The access will be automatically connected if the data was entered correctly.
The yellow bar displays the signal strength.
Beside this, you can see the connected SSID.

W-LAN is immediately activated, when the Atevio is in Standby (A/V Settings –Standby „On“).
If the Atevio was disconnected from the power (even if A/V Settings – Standby „Off“), wait for 30 seconds.
The setting “W-LAN” will be turned on automatically.

3.5 System Recovery

- **System restore to factory default:** This menu allows you to restore the factory set values in case the user has encountered some problems after changing any new parameters of service data and other parameters which may be in error. Press the **OK** button to erase all services and restore default setting.
- **System restore to stored position:** This menu allows you to restore the stored values including service data and system parameters. Press the **OK** button to restore all data.
- **Store system data:** If you want to use system parameters and service data in the future, this menu allows you to store current state. Press the **OK** button to store current state.



3.6 System Information

This menu displays general information about the hardware and software version of your receiver.

4. Utilities


4.1 Calculator

To use the calculator, highlight the calculator and press the **OK** button.



4.2 Calendar

To display the calendar, highlight the calendar and press the **OK** button. Utilize the **ARROW** buttons to choose the date. If you press **PAGE UP/DOWN** button, you can see the past/next month of the calendar.

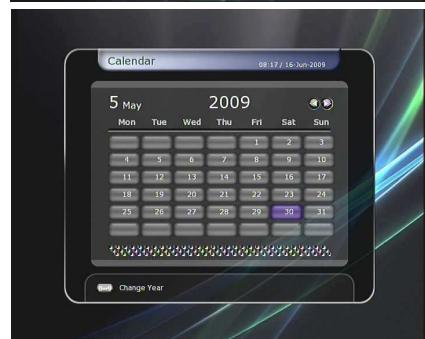

4.3 CAS (Conditional Access System)

● Smartcard Slot

- Conax smartcard menu:

To watch scrambled services, you need to have an appropriate Conax smartcard from the service providers. Insert a valid smartcard into smartcard slot. The message of 'Smartcard Initializing...' will appear on the screen. After the message disappears, you can watch the service you want.



- Smartcard information:

You can view the current status of smartcard. Select the slot which you want to view using the **ARROW** buttons. And press the **OK** button.

● CAM Initializing

To watch scrambled services, you need to have a Common Interface Conditional Access Module (CAM) and an appropriate smartcard from the provider. Insert the CAM together with a valid smartcard into CI slot (two slots available). The message of 'CI Initializing...' will appear on the screen. After the message disappears, you can watch the service you want.



● CAM information

You can view the current status of CAM. Select the slot which you want to view using the **ARROW** buttons, and press the **OK** button. If the CAM is available, you can view information about each slot.

NOTE: The displayed information of each CAMs may be different depending on the CAM used.

Software update for Atevio via USB or Network

You find the latest Software for your Atevio here: www.atevio.de.

Software update via USB

You can save the Software directly on the USB flash drive or save it on your PC before you copy the Software on an USB flash drive.

The USB flash drive has to be formatted in FAT32, otherwise the system is not able to recognize it.

Plug in the USB flash drive in the USB Port at the front of your receiver.

It doesn't matter if

1. you are currently watching TV
2. the receiver is in Standby.

In case 1 the USB flash drive will be recognized automatically and a pop up window will show you the option "Software Download" and "Channel Data Download".

You can switch with the left and right button.

Also this window displays the current software version.

Choose the software or the channel list you like to import and push the red button to start the download.

In case 2 switch on the receiver.

When the pop up window appears continue with the download as described in case 1.

Online-Softwareupdate

To update your receiver via Network the Address is <http://www.atevio.de/database/AV7000/>

Voraussetzung dafür ist, dass das Gerät mit dem Internet verbunden ist.

The Atevio has to be connected with the internet.

Please enter the Address under 3.4 "Network Settings – Firmware Upgrade Server".

You can't enter **http://**. This is preset and can't be changed.

The input takes place like the one from the installation of the W-LAN.

If the input is done choose Download and push OK.


Now the system is checking which Software Version is available.

Before you start the software download, check if the offered software is more recent than your receiver is currently running with.

Hard Disk installation

The installation of a hard disc can easily be made by yourself.
Before you start, consider the following steps.

- The Atevio has to be turned off and detached from the power supply.
- Avoid unnecessary touching parts inside the box.
- Pay attention to electric static. Discharge yourself, for example at a radiator.

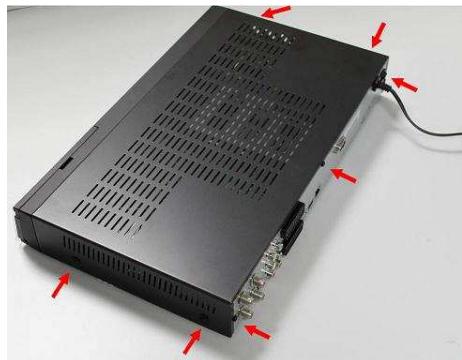


To open the Box the seven screws from the housing (as the picture shows) have to be removed.
Pull the top cover carefully backwards.



You find the S-ATA connector on the Mainboard directly above the Processor.
The connector is encircled in the picture. The connector and the plug have a lug.
This provides only one fitting position.



The picture shows the correct installed plug.

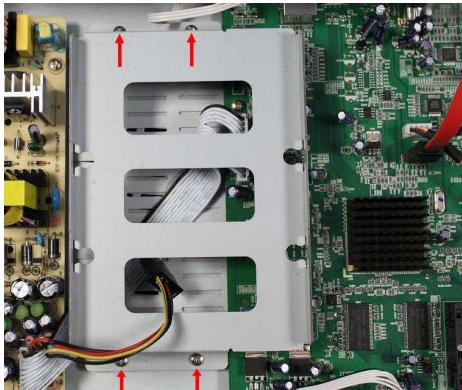

Now remove the four screws which are holding the hard disk frame.



Now the hard disk has to be fixed into the frame.
Therefore put the four rubber cushions from aside into the designated indentations.
Continue with fixing the hard disk with the enclosed screws.
Pay attention to adjust the hard disk into the right position.
Otherwise the cables can't be connected.



Fix the hard disk frame with the housing.
Now you can connect the power cord and the S-ATA cable as the picture shows.
The data cable can be connected before.
There is only one fitting position for the plugs.


When the installation is finished, you can fix the top cover with the screws. Now you can connect all devices and plugs as before. Now plug in the power cord and turn on the receiver.




The screen displays the message "Format Hard Disc".
You have to confirm this with "Yes".
If the screen doesn't display this message or you skip that by mistake,
find the next step on the following page.
The HD will be formatted with the file system "Journaled".



The hard disk will now be formatted.
Depending on the size of the HD, this procedure could take up to two minutes.

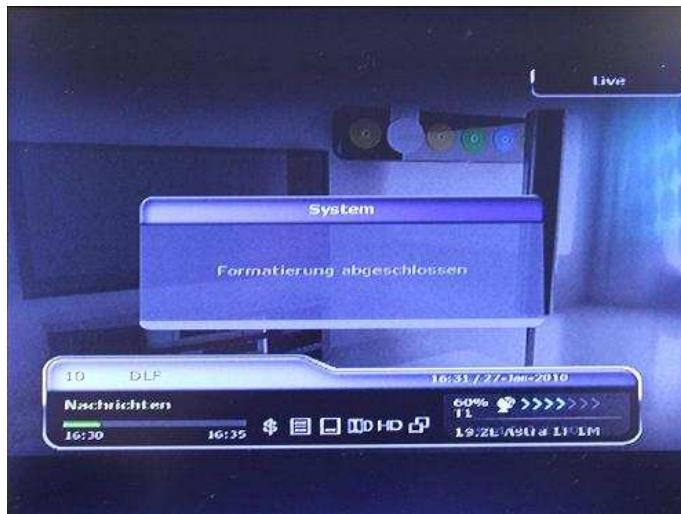


When the formatting is completed a message will confirm that.

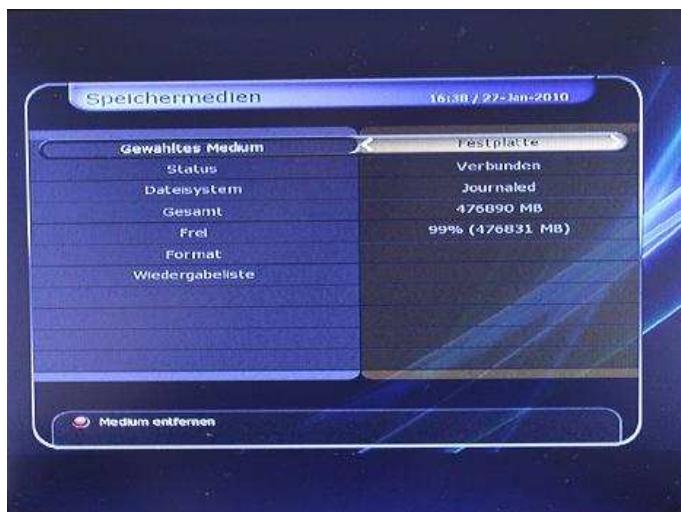


In the menu System Tools – Storage Manager you can see if the formatting was successful. By success the HD will be shown as “Mounted”.

If the screen doesn't display a formatting window in first place, continue as following:

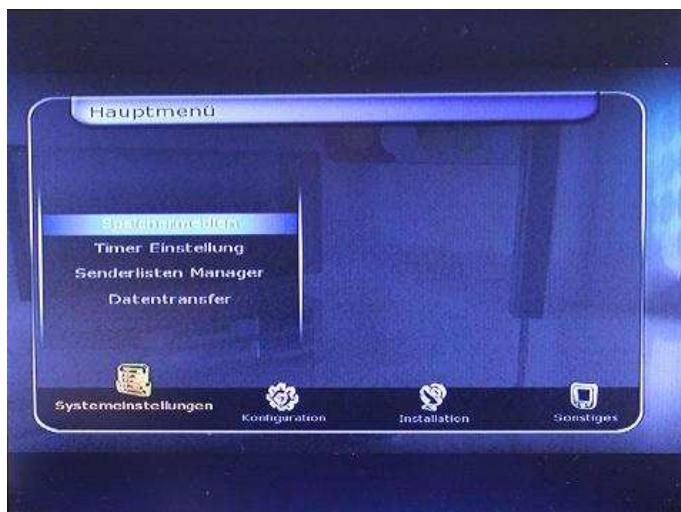


Find the menu “System Tools – Storage Manager”, as the picture shows.

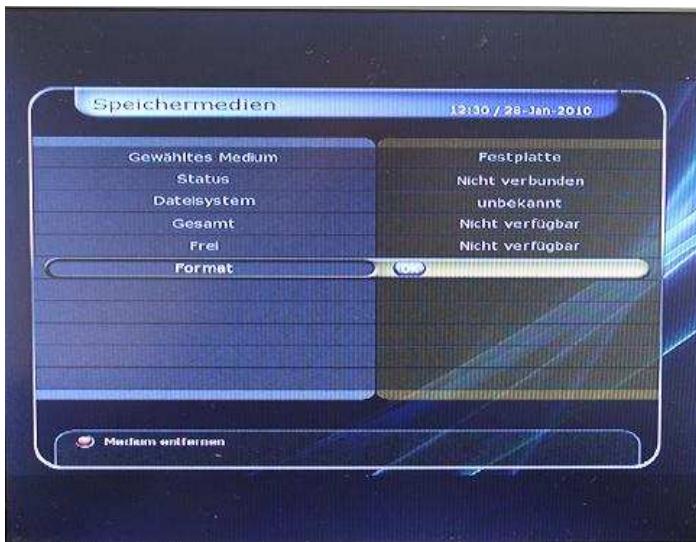

In the menu "System Tools – Storage Manager"

you will see that the HD is not connected.
Choose "Format" with the OK button and
confirm the following message.

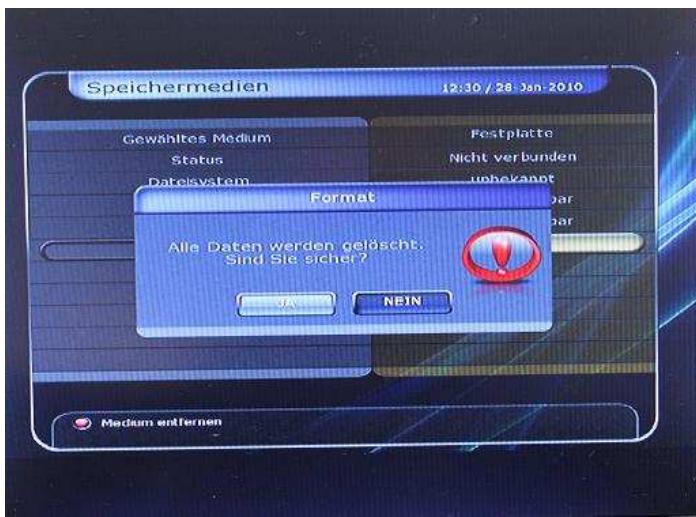

"All Data will be DELETED. Are you sure
to continue?" with "Yes".

The HD will be formatted with the file
system "Journaled"



When the formatting procedure is successful
completed, the Storage Manager displays the
HD as "Mounted".

Troubleshooting

Problem	Solution
Does not display any message on the front panel.	<ul style="list-style-type: none"> ✓ Check the main power cable and check that it is plugged into a suitable power outlet. ✓ Check the STB main power switch 'ON' at the rear of the STB.
No Picture	<ul style="list-style-type: none"> ✓ See 'Does not display any message on the front panel' above. ✓ To match the STB system with your TV system (PAL/NTSC), press <i>V.Format</i> button until a picture is displayed. ✓ Check the video output port is firmly connected to the TV or VCR. ✓ If you are using the RF output, check that the RF lead is connected firmly to the STB and TV/VCR. ✓ Check that you have selected the Video Input on your TV. ✓ Press the STB button on the remote to assure you are controlling the STB and no other device with the remote. ✓ Check the brightness level of the TV. ✓ Check the resolution that your TV supports, and set the proper resolution with the remote <i>576/1080</i> button to obtain a picture.
Poor picture quality	<ul style="list-style-type: none"> ✓ See 'No Picture' above. ✓ Check the signal level, if this is low then tries adjusting the alignment of your dish.
No Sound	<ul style="list-style-type: none"> ✓ See 'No Picture' above. ✓ Check the volume level of the TV and STB. ✓ Check the Mute status of the TV and STB.
Remote Control does not operate	<ul style="list-style-type: none"> ✓ Point remote control directly towards the STB. ✓ Check that the STB button lights up when you press any button ✓ Check and replace batteries.
No or Bad Signal	<ul style="list-style-type: none"> ✓ Check the LNB; Replace the LNB if necessary. ✓ Check the cable from the LNB. ✓ Check the position of the dish; realign dish if necessary. ✓ If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch. ✓ Check the 'Signal Level' and the 'Signal Quality'.

Specifications

Tuner & Channel Decoder

Input Connector	F-type, IEC 169-24, Female
Loop through out	F-type, IEC 169-24, Female
Frequency Range	950MHz ~ 2150MHz
Input Impedance	75Ω, unbalanced
Signal Level	-65 to -25dBm
LNB Power	13/18VDC, max.400mA
22KHz Tone	(22±2)KHz, (0.6±0.2)V
DiSEqC Control	V1.0/1.2/USALS Compatible
Demodulation	QPSK / 8PSK
Input Symbol Rate	2 ~ 45 Ms/s(QPSK of DVB-S) 2 ~ 45 Ms/s(QPSK of DVB-S2) 2 ~ 37 Ms/s(8PSK of DVB-S2)
FEC Decoder	1/2, 2/3, 3/4, 5/6 and 7/8 with Constraint Length K=7(DVB-S) 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9 and 9/10 (DVB-S2)

MPEG Transport Stream A/V Decoding

Transport Stream	H.264(MPEG-4 part 10, MPEG-4/AVC and H26L) MPEG-II ISO/IEC 13818-2/11172-2
Profile Level	MPEG-4/AVC MP@L4, MPEG-II MP@HL
Input Rate	Max. 15Mbit/s
Video Formats	4:3 Letter Box, 4:3 PanScan, 16 : 9
Video Resolution	720 x 576i, 720 x 576p, 720 x 480i, 720 x 480p 1280 x 720p, 1920 x 1080i
Audio Decoding	Dolby AAC, AC-3, MPEG-1 Layer 1,2 and 3
Audio Mode	Stereo/Joint stereo/Mono, Dolby AC-3
Sampling Rate	32KHz, 44.1KHz and 48KHz(According to input)

Main System

Main Processor	STi chipset
Memory	Flash-ROM : 32 Mbyte
	SDRAM : 192 Mbytes
	EEPROM : 128 bytes

Audio / Video & Data IN/OUT

TV SCART	RGB, Y/C, CVBS Video, Audio L, R Output
VCR SCART	CVBS Video, Audio L, R Output
	RGB Video input, CVBS Video, Audio L, R Input
RCA	CVBS Video Output, Audio L, R Output
Component	YPbPr Video Output
HDMI	Video & Audio Output
OPTIC	AC-3 Dolby Digital (SPDIF)
RS-232C	9 pin D-SUB (Male) type, Transfer rate 115Kbps
USB	USB 2.0 Host Front & Rear Support. (5 Vdc 500 mA max.)
Ethernet	RJ45 connector, 100 Mbps

Front Panel

Slot	1 USB 2.0 Host port 2 Common interface PCMCIA slot 2 Conax Smartcard Slot
Display Buttons	VFD(Vacuum Fluorescent Display) - 12Digit 7 Buttons (Standby, Menu, Select, CH UP/DOWN, Volume UP/DOWN)

Power Supply

Input Voltage	AC 100 ~ 250V, 50/60Hz
Type	SMPS
Power Consumption	Max. 35W
Standby Power	Max. 1W
Protection	Separate Internal Fuse & Lighting protection

Physical Specification

Size (W x H x D)	430mm X 60mm X 270mm
Weight (Net)	2.7 Kg (Excluding HDD)
Operating Temp.	0°C ~ +45°C
Storage Temp.	-10°C ~ +70°C

Code list for the universal remote control

1. TV - List

Refer to '**5. Multi-Brand IR Remote Controller Setting**' at page 14 of this manual.

TV Brand	Code-Nr.							TV Brand	Code-Nr.						
2								Arc En Ciel	780	784					
2M Electronics	248							Arctic	486	488					
A								Aristona	250	419	421				
A.R.Systems	212	280	285	419	421	504		Art Tech	421						
	518	774						Asa	265	275	351	353	564		
Accent	153	421						Asberg	348	351	421	752	760		
Action	153	281	421	666	766			Asora	153						
Admiral	153	193	285	421	558	752		Astra	153	421					
Advent	723							Asuka	145	285					
Adyson	292	421						Atec	335						
Aeg	487	741						Atlantic	263	421	776				
Agashi	421							Atlas	419						
Agazi	285							Atori	153						
Agb	206							Atoro	153						
Aiko	153							Audio Technica	204						
Aim	421							Audiosonic	145	153	258	260	285	421	
Aiostay	212	558						Audioton	153						
Airis	633							Audiovox	421						
Aiwa	165	243	421					Ausind	351						
Akai	145	148	153	213	240	251		Autovox	216	351	776				
	277	368	370	381	398	405		Aver Media	687						
	414	421	423	472	486	488		Awa	153	421					
	498	628	665	725	766	776		Axxion	144	153	277				
	782							B							
Akiba	145							Bang	241						
Akira	421	736						Bang & Olufsen	421	543	561				
Akura	145	153	260	285	421	473		Basic Line	144	145	148	153	156	398	
Alba	145	153	157	213	260	277			405	421	472	473	486	487	
	285	327	329	398	405	421			488	489	606	741	743		
	453	697	720	743	752			Bauer	288						
Albiral	212	421	753	760				Baur	153	240	241	250	251	347	
Alcyon	351								363	419	421	425	451	491	
Alfa	426								530	535	537	610	615	620	
Allorgan	698	776						Baysonic	285						
Allstar	421	504						Bec	206	421	666	766			
Alphatronik	598							Becrese	347	421	610	620	665	666	
Altus	486	488						Beko	258	260	266	398	400	433	
American High	281								485	486	488	493	503	670	
Americana	281								671	742	743	782			
Amstrad	146	153	363	578	768			Bell & Howell	193	421	605				
Andersson	472							Benchmark-Beaumark	153	281	421				
Anglo	153	285						Benq	673						
Anitech	144	153	285	292	348	351		Beon	421	752					
	421	504	760					Best	258	260					
Anasonic	153	217	258	260	285	398		Bestar	260	421					
	405	472	487	489	507	523		Bigston	153						
	743	760						Black Panther	760						
Antecno	145							Black Star	217						
Aoc	421	684						Blackstripe	281	605	610	620			

TV Brand	Code-Nr.							TV Brand	Code-Nr.						
Blaupunkt	148	157	238	240	241	243		Computron	153	421					
	247	250	251	255	270	271		Concorde	153						
	273	419						Condor	144	153	217	260	421	504	
Blautech	516							Conic	421	666					
Blue Sky	145	157	398	405	421	455		Conrac	745	746					
	472	473	486	487	488	489		Constructa	419						
	507	523	674	712	741	743		Contec	144	153	301				
Bondstec	216							Continental	157						
Boxford	496	502	705					Continental Edison	157	780	784	793			
Brandt	303	780	782	784	793			Corfung	285						
Brandt Electronique	780	784	790	793				Cosmel	153						
Braun	425	794						Craig	421						
Brendstar	153							Crosley	217	260	271	348	351	421	
Brinkmann	752							Crosley	558	666					
Brionvega	421	423	519	558	756			Crosswood	398	405					
Brother	285							Crown	153	193	258	260	261	348	
Bruns	258	558	758	760				Crystal	421						
Bsr	698							Cs Electronics	145	216	217				
Btc	145							Ctc Clatronic	217	752	760				
Bush	145	157	213	277	282	285		Curtis	421	513	752				
	329	398	405	415	421	453		Curtis Mathes	281	421	605	620			
	486	697	743					Cyberpix	473						
C															
Campomatic	622							D							
Capehart	421	766						Daewoo	153	156	161	163	164	165	
Capsonic	285	421							166	167	168	218	421	430	
Carrefour	351	421							441	453	504				
Carver	421							Daichi	153						
Casio	426							Daimond	421						
Cathay	421							Dainichi	145						
Cci	583							Dalco	735	736					
Centurion	421							Dantax	258	447	486	488			
Century	217	558						Davis	421						
Cge	153	217	271	272	348	351		Dawa	421						
	752							Daytron	153	610					
Cgm	144	153						Dce	398	405	432				
Changhong	617							Deca	507	523					
Charisma	551							Decca	207	421	450	507	523	559	
Charpy	634							Dell	739						
Ciate	558							Denon	732						
Cie	153	156	216	578				Denver	153						
Cihan	426							Desmet	153	421					
Cimline	153	697						deuromedia	566						
Cinex	507	523						Diamond	153						
Citizen	281	421	620					Diboss	505	509					
City	153							Digiline	743						
Clarivox	206	210	212	217	346	421		Digitech	363						
	748	763	773					Dixi	153	421	758				
Claton	398	405						Dmtech	398	405	472	473	474	521	
Clatronic	145	153	217	260	277	348		Dts	153						
	421	486	488	752	760			Dual	145	153	262	263	347	363	
Claud	421							Dumont	421	429	439	443	452	453	
Clubinternet	621								265	351	558	752	760		
CMX/Commax	686														
Colortyme	281	421													
Combi	692														
Compute	509														

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Dynamic	153						Finlux	153	207	217	265	275	276
E								351	353	368	369	370	371
Eaton	281							373	376	378	381	384	419
Ecrom	398	405						421	450	486	507	523	558
Ecron	455							729	744	750	752	760	
Edison	157						First Line	153	156	212	217	398	405
Edison Minerva	157							419	421	472	473	486	488
Eksperten Vest	252							504	532	606	686	698	743
Elbe	212	262	398	405	419	421	Fisher	159	260	265	347	537	558
	459	487	489	573	704	706		605	607	608	610	758	759
Elbit	421	426	444				Flint	421					
Elbit Fraba	436						Force	587	726				
Elcit	217	760					Formenti	213	351	421	426	429	
Elecs	426						Fortress	193					
Electro Tech	153						Fraba	260					
Electrohome	605	666					Frontech	153	209	217	285		
Electronika	261	421	445				Fuji	776					
Elekta	144	153	285				Fujitsu	234	263	538	745	746	766
Elektronika	261	426	445				Fujitsu General	776					
Elemis	258	260					Fujitsu Siemens	263	776				
Elin	153	265	421	504			Fulton	479					
Elite	145	273	281	421	605	620	Funai	518					
Elmak	395	431	435	741			G	153					
Elman	760	782					Galaxis	260	752	760			
Elta	153	421					Galaxy	260	752	760			
E-Max	675	726					Galeria	153					
Emerson	145	258	260	277	398	405	Gbc	153	210	218	421		
	421	486	487	488	489	558	Ge	790					
	743	760	773				Gec	207	421	666	750		
Eon	281						Geloso	145	153	218			
Erres	419	421	528				Gemsound	153					
Eternity	726						General	153	736				
Etron	153	421					General Technic	153					
Euro-Feel	285						Genexxa	145	421				
Euroline	426	486	488				Gericom	335	717				
Euroman	421						Giant	421					
Euromann	258	285	421				Gitem	250	421	784	790		
Europhon	206	213	214	217	421	760	Gm	153					
	762						Gmg	153	752				
Excelsior	397						Goldhand	153					
Expert	263	373	776				Goldi	423					
F							Goldstar	150	153	157	209	216	240
Fenner	153	421	743					666	755	766			
Ferguson	176	212	240	241	251	265	Goldy	736					
	271	301	303	346	359	388	Goodmans	145	153	156	165	167	172
	390	419	421	459	465	517		277	311	325	329	359	394
	530	535	537	610	615	620		398	405	406	419	421	428
	626	661	663	666	670	671		432	441	452	472	473	504
	694	750	765	767	782	784		511	571	628	677	689	725
	788	789	790	793	796			743					
Fidelis	153	421					Gorenje	258	260				
Filsai	153						Gpm	145	153				
Final	560						Gradin	145	153	421			
Finlandia	275	606	790				Graetz	398	405				
							Gran Prix	507	523				

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Granada	148	176	189	192	207	227	Hyper	153	213	216	277	426	
	258	260	275	346	373	375	Hypervision	476					
	381	408	419	421	456	463	Hypson	153	285	421			
	605	606	608	615	620	651	Hyundai	162	283	286	516	723	
	655	658	665	750	766	767		728	736			727	
	790												
Grandin	398	405	704	743			I						
Grenadier	153	421					I.V.	421					
Gronic	421						Ice	145	153	209	213	277	
Grundig	152	157	236	237	238	239	Ikei	588					
	240	241	243	247	250	251	Im Internet	740					
	254	256	259	261	327	346	Imperial	217	260	271	348	351	
	348	350	351	355	356	400		752			421		
	404	419	421	423	426	445	Indesit	788					
	455	456	459	477	516	542	Indiana	421					
	697	726					Infinity	421					
Grunkel	398	405					Infratex	284	330	426	453	733	
Gtt	153	752						741	743	747	769	772	
Gze Unimor	260						Ingelen	704	742				
H							Ingersoll	153					
Haier	181	283	287	291	456	605	Inno Hit	153	206	349	421	750	
	608						InterACTV	482					
Halifax	285						Interbuy	153	217	285	292		
Hanseatic	153	165	250	258	262	347	Intercord	347					
	421	429	453	467	504	698	Interdiscount	303	421	537	784	790	
	755	756					Interfunk	217	260	270	354	419	
Hantarex	153	210	421					557	564	610	752	784	
Harley Davidson	281						Intertronic	446					
Hb Ingelen	398	405	486				Intervision	145	216	217	258	260	
Hcm	144	145	153	258	285			292	419	730	755	760	
Heathkit	421						Irradio	145	153	216	346	349	
Hifivox	780	784						421	504			351	
Hiline	153						Iskra	760					
Hinari	145	153	301	421	504		Ist	145	213	421			
Hisawa	145						Isukai	145	421				
Hisense	685	686					Itl	153					
Hit	558						Its	145	153	209	277		
Hitachi	165	167	193	207	250	303	Itt	192	193	243	301	346	
	347	368	373	398	405	421		373	381	605	610	697	
	432	434	441	448	450	453	Itv	756	780			744	
	456	462	472	473	610	620		285	504				
	636	637	638	639	640	641							
	643	644	645	646	647	648							
	649	650	651	652	653	654							
	655	656	657	658	659	660							
	661	662	663	664	665	666							
	667	668	669	670	671	672							
	731	750	756	766	780	793							
Hitachi Fujian	639												
Hoher	398	405	472	473	486	488	J						
Höher	398	400	405	455	472		Jacson	208	750				
Home Electronics	705	741					Jbl	421					
Horizont	426						Jdb	705					
Hornyphon	421						Jec	620					
Hoshai	145						Jetpoint	281	421				
Hotel International	257						Jinlipu	153					
Hq	421						Jrc	277					
Humax	160	679	680	681	682	683	Jumbotronic	426					
	710	716					Jvc	196	197	198	199	200	
	752							202	203	204	205	201	
Huspi Elektronik								605	744				
							K						
							Kaiser	421					

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Kaisui	145	153	421				Lodos	405					
Kambrook	303	793					Loewe	206	227	303	416	421	425
Kapsch	263	776						440	451	461	497	558	563
Karcher	153	258	261	421	504	507	Logik	301	694				
	523	762					Lögik	301	421				
Kawa	277						Love	212					
Kds	227	419					Luma	153	263	421	776		
Kendo	153	398	405	421	449	485	Lumatron	263	398	405	414	574	743
	504	697	704	756	757	760		776					
	776	777					Lux-May	277	421	773			
Kenmark	406	678					Luxor	153	275	349	354	368	370
Kennedy	145	263	776					373	376	378	379	384	398
Kennex	441							405	450	501	515	744	766
Kenstar	632						Lxi	193	421	605			
Kenwood	238												
Kerion	421						M						
Keymat	336	586	623	635			M Electronics	153	218	265	275	347	373
								376	378	381	384	421	782
Kimay	285						Magasin	597	600				
Kiota	153						Magnadyne	153	206	216	217	218	421
Kiton	398	405						426	504	558	752	760	
Klh	766						Magnafon	206	213	351	426	760	762
Kloss	281						Magnasonic	153	193	421	504	605	
Kneissel	156	212	262	421	441	573	Magnavox	419	421	437	666		
	704	743	748				Magnex	421					
Kobic	153						Magnum	455	520				
Kolster	145	216	421	760			Mandor	285					
Konichi	153						Manesth	285	421	697			
Konka	145	171	277	290	568		Marantz	347	418	421	471		
Korpel	421						Mark	156	258	398	405	421	451
Kortek	719							486	488				
Körting	258	260	261	558			Marshal	145					
Kotron	572						Mascom	507	523				
Kuasho	421						Mascot	217					
Kuba	347						Match Italia	421					
Kuba Electronic	347						Matsui	153	157	213	240	241	277
								301	329	331	332	333	398
								405	504	538	578	605	606
								608	626	694	697	700	
L													
Latona	716						Maxam	153					
Lavis	156	421	445	455	748		Maxell	153					
Leader	153						Maxwell	760					
Legend	153	421					Mc Michael	666					
Lenco	153	154	156	170	285	421	Mce	153					
	466	760					Mcperson	512					
Lenoir	153	421					Media Station	627					
Lesa	217						Media Tv	442					
Level	688						Mediator	421					
Lexus	285						Medion	368	369	398	405	423	453
Leyco	285	421	698	766				472	486	487	488	489	628
Lg	455	472	473	486	488	504		725	743	745	746		
	508	577	590	591	592	593							
	594	595	597	599	600	601	Megas	704					
	632						Megatron	665					
Liesenkötter	421						Melbox	763					
Life	153						Melectronic	373	376	377	381		
Lifetec	145	153	156	285	398	405	Memorex	153	285	605			
	421	427	453	743			Memory	472	473				
Linitron	193						Memphis	153	766				
Lloyd'S	153	346					Mercury	153	421				
Locatel	235												

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Meteor	762						Nordmende	192	303	304	333	423	426
Metz	240	241	242	243	244	245		780	782	784	787	789	790
	246	249	250	251	253	385		793					
	386	387	398	405	472	504	Nordway	212					
	557	558	562	564	565	567	Nortek	421					
	745						Northern Star	716	718				
Mga	421						Nova	265	421				
Micromaxx	398	405					Novatronic	153	421				
Minerva	157	240	241	250	251	346							
	351						O						
Minoka	421						O General	153					
Minsonic	152						Oceanic	194	373	376	378	381	384
Mirai	534	538	575	707				605	698	776			
Mitsubishi	153	173	174	175	176	177	Okano	153	260	751			
	178	240	251	301	421	441	Olympic	153					
	456	558					Onceas	153	218				
Mitsubushi	398	405					Onida	421					
Mivar	210	213	215	262	349	352	Onkyo	711					
	761						Onwa	145	213	277			
Monitor	281						Opera	421					
Motion	351						Optanka	193					
Motorola	193	421					Orava	426	438				
Mtc	260	281	451				Orbit	421					
Multichoice	477	703	738	795			Orbiter	260					
Multimedia	151						Orian	735					
Multistandard	760						Orient	153					
Multitec	398	405					Orion	145	153	179	180	285	301
Multitech	153	217	301	348	421	760		305	329	330	332	333	339
Murphy	265							398	405	419	421	423	426
								430	437	447	459	535	578
								697	698	700	726	779	
N							Osaki	145	421	766			
Naim	478						Oso	145					
Namsunc	153						Osume	766					
Nap	421						Otake	697					
National	421						Otava	464	504	514	517	518	
National Star	736						Otf	153					
Nec	153	281	301	584	713	714	Others	142	144	145	153	206	209
	715	716						211	240	277	279	301	303
Neckermann	153	197	206	217	240	241		349	398	421	434	470	493
	243	250	260	261	270	347		504	510	517	605	651	675
	419	421	426	447	453	504		698	750	766	786		
	528	530	535	537	558	697	Otrum	423					
	698						Otto Versand	144	148	153	189	192	193
Nei	145	421	773					194	214	216	217	227	240
Neovia	324	506	717					241	243	250	251	258	277
Nesco	218							347	363	419	421	425	426
New World	145							447	453	504	528	530	535
Newtech	153	421						536	537	610	615	620	697
Nikkai	145	285	421	620	766			698	755	756	779	782	790
Nikkei	421						Ovp	499	500				
Nikko	504	775					P						
Nissan	281						Pacific	333					
Noblex	153	159					Pael	213	346	504			
Noblisko	213	346	348	760			Palladium	243	250	260	398	405	421
Nogamatic	780	784					Palsonic	421					
Nokia	144	153	275	276	277	281	Panama	153	217	285	421		
	285	354	368	370	372	373	Panashiba	153					
	374	375	376	377	378	379							
	381	382	383	384	421	426							
	558	605	610	744	752								

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Panasonic	147	148	222	223	224	225	Proton	153					
	226	227	228	229	230	231	Proviev	631					
	232	233	240	246	250	251	Provision	419	486	488	504		
	421	750					Pulser	153	281	421	666	766	
Panavision	737						Pye	421					
Panavox	153						Pymi	153					
Panorama	153						Q						
Panoramic	784						Qty1	426					
Pathe	262	780	784				Quadro	394	398	405	414	432	446
Pathe Marconi	780	784					Quasar	153	217	760			
Pausa	153						Quelle	148	153	197	216	227	240
Pce/Pec	281	605	610	620				241	243	250	251	260	261
Peacock	335	574	673					263	265	270	271	272	273
Penney	281	347	620					275	301	346	349	351	353
Perfekt	421							363	373	376	378	381	384
Performance	301							398	405	414	418	419	421
Pershin	346							425	426	447	451	504	528
Philco	153	217	260	271	348	351		530	535	537	540	578	610
	421	558	666	748	752			615	620	697	698	743	751
Philex	421							759	776	790	796		
Philips	250	263	303	392	393	395	R						
	396	397	399	401	402	406	R Line	421					
	408	409	410	411	412	413	Radio Shack	193	605				
	417	418	419	420	421	423	Radiola	419	421	456			
	424	426	436	445	456	459	Radiomarelli	206	217	218	426		
	460	465	468	504	525	526	Radiotone	153	258	285	398	405	421
	527	528	537	615	666	766		504	743				
Phocus	400												
Phoenix	421	426	447				Radix	610					
Phonola	421						Rank	351					
Phonetrend	724						Rca	281	544	545			
Pioneer	303	338	340	341	421	426	Realcolor	209					
	548	549	550	552	553	554	Realistic	605					
	555	556	793				Recor	421	426				
PKS	421						Record	149	258	421	426		
Plantron	153	285	421				Red Star	507	523				
Platinum	690						Regente	153					
Playsonic	398	405	486	488			Relisys	631					
Policom	760	784					Revox	351	421	451			
Poppy	153						Rex	262	263	776			
Portland	426						Rft	145	258	262	264	423	558
Prandoni Prince	206	217	277	351	504	760	Rice Club	281					
Prima	153	281	285	421	605	620	Roadstar	145	153	258	285	329	398
Princess	153							405	414	419	421	426	447
Pringston	486	488						455	486	488	514		
Prinz	347	766					Robotron	241					
Pro Basic	699						Roombase	576					
Proelco	258	426					Rosita	153					
Profex	153	348	760				Rosner	209					
Profilo	479	480	487	489	495	507	Rowa	153					
	522	523	617				Royal	144	145	153	240	258	284
Profitronic	421	504	760				Royal Nec	486	488				
Proline	165	406	441	450	492	524	Runco	281					
	571	582	678	756									
Proscan	281												
Prosonic	486	488	518										
Protec	153	217	285	421	760								
Protech	398	405	419	421	743								

TV Brand	Code-Nr.							TV Brand	Code-Nr.						
S															
Saba	206	241	303	304	358	390	784	Sicatel	260	764					
	488	760	778	780	782	784		Sice	240	251					
	789	790	791	792	793			Siemens	240	241	243	250	251	259	
Sagem	693	701	704						270	273	421	444	456	470	
Saisho	209	301	421	578	697			Siena	507	523	773				
Saivod	398	405	472	473	486	487		Siera	455						
	488	489	507	523	743			Sierra	455						
Sakio	153	285						Siesta	421						
Sakura	153							Sigmax	258	260					
Salora	275	349	368	369	373	376		Signature	281						
	377	378	380	381	384	425		Silma	620						
	495	605	744	766				Silva Schneider	421						
Sambers	206	346	348	349	351	504			153	398	432	458	472	473	
	760	762							479	480	487	489	495	503	
Samsung	153	154	158	159	209	260			504	505	507	508	509	522	
	281	285	289	307	308	309		Silver	523	570	613	617			
	310	312	313	314	315	317		Singer	145						
	318	319	320	321	322	323		Sinotec	153	217	421	558	760		
	349	399	407	421	428	490		Sinudyne	504						
	491	494	504	510	517	676		Sinudyne	333	421	423	426	437	447	
Samsung	750	751	766						449	455	537	558	578	697	
Sansui	153	281	285	301	421				698	741	760	762	779		
Sany	303	793						Sky	337	581	709	726			
Sanyo	153	209	260	262	265	301		Smaragd	157						
	347	398	405	472	473	488		Snyder	421						
	507	523	558	602	603	604		Sogo	487	489					
	605	606	607	608	609	610		Sole	155						
	611	626	750	758	759	766		Sonitron	260	605	606	607	610		
Sbr	421							SONiX	616	726					
Schaub Lorenz	398	405						Sonoko	153	285	421				
Schneider	145	153	216	262	263	277		Sontec	260	421					
	285	347	348	363	391	398		Sony	270	301	302	419	421	528	
	399	405	419	421	426	432			529	530	531	532	533	535	
	440	444	445	453	455	456			536	537	539	540	541		
	457	458	459	481	486	487		Sound & Vision	145	760					
	488	489	495	504	505	506			507	523					
	507	509	512	520	523	743		Soundcolor	281						
Scientific Labs	495							Sounddesign	153						
Scott	596	691						Soundmaster	156						
Screenlant Tft	458							Spectra	421						
Sea	472	473						Spectriician	605						
Sears	605							Sr2000	145	153	218				
Seg	145	153	209	217	285	348		Standard	283	421	517	696	736		
	394	398	405	414	415	472		Star	735						
	473	540	743	758	760			Star General	153	504					
Seleco	262	263	419	421	482	756		Starlite	153						
	757	770	776	777	780	790		Starlux	153						
	795							Staßfurt	758						
Sencora	153							Stern	262	263	776				
Sentra	145	620						Strato	285						
Serino	704							Sungoo	629						
Sharp	182	183	184	185	186	187		Sunkai	145	697	698				
	188	189	190	191	192	193		Sunrise	158						
	194	195	421	620	657	756		Sunstar	153						
Shintom	504							Sunwatt	421						
Shintoshi	504							Sunwood	153	421					
Shivaki	149	421	504					Supersonic	421						
Shorai	698							Supertec	153	421	426				
Show	153							Supertech	153	426					
Siarem	206	210	558	760											

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Supra	153						Tevion	398	405	453	486	488	507
Sutron	153							523	585	628	716	725	743
Swisstec	288	569	580	581	585	589	Thomas	153	281	421	666	766	
	708	709	717	724	726		Thomson	169	212	240	265	271	303
Syc Line	153							346	358	359	360	361	362
Sylvania	421							390	457	765	780	782	784
T								785	788	789	790	793	796
Tadistar	504						Thorn	176	212	240	251	265	276
Talent	240	251						278	301	346	421	465	517
Tandberg	246	398	630	784				537	609	610	620	625	626
Tandy	145	193	217	766				661	666	750	765	782	784
Targa	321							788	789	790	793		
Tashiko	666						Thorn-Ferguson	212	240	250	251	271	303
Tatung	157	207	301	316	408	421		346	421	535	537	765	782
	423	447	450	495	502	507		784	788	793	796		
	515	518	523	559	671	750							
	766	767					Tmk	281					
Tauras	613						Tobo	153					
Teak	153	421					Tokai	418	421	766			
Tec	153	156	216	217	263	773	Tokyo	158	281				
Techline	414	760					Toshebia	736					
Technica	281	398	405	472	473	487	Toshiba	165	240	241	281	308	326
	489	741						328	329	351	398	405	421
Technics	421							486	488	605	610	612	614
Techniland	421												
Technisat	423	741	771				Tosonic	615	617	618	619	620	624
Technol	153	421						625	626	721	722		
Technosonic	423						Towada	281					
Technotrend	724						Transonic	760					
Techwood	186	281	394	398	404	405		421					
	473						Trc	144	153	504			
Tecnimagen	418	423	455	488			Trevi	153					
Tecnison	153	504					Triad	421					
Teco	143						Triax	358	507				
Tedelex	153	421					Trilux	258	408	426	441	743	
Teknant	153	421					Tristar	145					
Tekon	153	281					Triumph	351	578				
Teleavia	303	780	782	784			Trivision	153					
Teleco	483						U						
Telefac	153						Uher	263	347	351	421	451	535
Telefunken	217	271	272	303	304	359		760	776				
	381	389	390	403	421	479	Ultra	766					
	480	745	776	778	780	782	Ultravox	213	217	421	558	760	
	783	784	785	787	788	790		793	303	346	421	780	784
	793	796					Uma	145	240	251	260	271	272
Teleopta	153												
Telerent	451						Unic	260					
Teleservice	240	251					Unimor	258	421				
Telestar	153	507	523				United	329	398	421	486	488	
Teletech	153	217	398	405	524	743	Universum	153	217	240	243	250	251
Teleton	263	776						258	259	260	265	271	275
Teleview	507	523						285	301	346	369	381	398
Telra	507	523						405	414	415	419	421	426
Tempest	153							445	475	504	537	743	776
Tensai	145	153	209	213	218	265	V	218	421	558			
	421	504	698	755	760		Vanguard	153					
Tenson	153						Vasilinec	153					
Tesla	421	484	504	558	741		Veco	153	421				

TV Brand	Code-Nr.						TV Brand	Code-Nr.					
Vega	558						Wegavox	153	217	421	752		
Vente	456						Welltech	486	488				
Vestel	394	398	405	406	414	415	Welstar	398	405	472	473	581	
	421	426	427	432	472	473	Weltblick	421					
							Whirlpool	358	359	456			
Vexa	153	421					White Westinghouse	213	398	405	421	454	605
Victor	204							752	760				
Videcon	421						Wilson	674					
Video System	421						Windsor	398	405	743			
Videologique	145												
Videosat	217						Winston	153	421				
Videoseven	538	726					Winternitz	153					
Videoton	303	752	781	793			Wizja	408					
Vidion	153						World Of Vision	306	335				
Viditel	285						World-Tech	156					
Viewpia	723						Worldview	153	421				
ViewSonic	334	702											
Vision	153						Y						
Vison	421						Yamaha	615	618	642	653		
Vogells	588						Yamo	145					
Vortec	421						Yevici	153					
Voxson	351	421	504	558			Yokan	421					
Vtq	758						Yoko	145	153	156	261	285	421
								426	605	784			
W							York	421	610				
Walkie	263						Yorx	145					
Waltham	303						Yoshita	421					
Wards	204	421					Yotaka	421					
Watson	145	153	273	398	405	414							
	421	426	486	488	743		Z						
Wattraudio	213	504	752	760	762		Zanussi	776					
Wega	558						Zenith	421					

2. Brand-Table

Brand	Brand code	Brand	Brand code	Brand	Brand code
A.R.Systems	212	Bruns	167	Elektronika	148
Accent	143	Bsr	134	Elemis	167
Action	204	Bush	190	Elin	233
Admiral	209	Cample	212	Elite	188
Adyson	208	Capehart	204	Elmak	124
Aeg	176	Capsonic	191	Elman	134
Aiostay	100	Carrefour	188	Elta	206
Aiwa	142	Century	173	E-Max	130
Akai	234	Cge	207	Emerson	219
Akira	139	Cgm	118	Erres	163
Akura	191	Cie	172	Etron	208
Alba	227	Cimline	216	Euroline	192
Albiral	184	Cinex	221	Euromann	191
Allorgan	210	Circuit City	212	Europhon	206
Allstar	221	Citizen	212	Expert	145
Altus	192	Clarivox	206	Fenner	233
Amstrad	172	Claton	185	Ferguson	244
Anglo	209	Clatronic	221	Fidelis	143
Anitech	208	Colortyme	204	Finlandia	135
Ansonic	203	Computron	143	Finlux	224
Aoc	142	Condor	221	First Line	199
Arc En Ciel	178	Conic	204	Fisher	180
Arctic	192	Conrac	175	Force	130
Aristona	163	Contec	212	Formenti	184
Asa	156	Continental Edison	149	Fortress	212
Asberg	184	Crosley	206	Frontech	209
Astra	143	Crosswood	185	Fujitsu	175
Asuka	221	Crown	207	Fujitsu General	175
Atlantic	215	Cs Electronics	221	Funai	212
Audiosonic	191	Ctc Clatronic	221	Galaxis	221
Autovox	145	Curtis	133	Galaxy	221
Awa	143	Curtis Mathes	212	Gbc	202
Axxion	118	Daewoo	177	Gec	182
Bang & Olufsen	133	Dalco	109	Geloso	202
Basic Line	214	Dantax	214	General	109
Baur	198	Daytron	162	Genexxa	191
Bec	146	Dce	185	Gericom	131
Becrese	209	De Graaf	175	Gitem	151
Beko	219	Deca	221	Gmg	221
Bell & Howell	212	Decca	193	Goldstar	204
Benchmark-					
Beaumark	204	Desmet	143	Goodmans	228
Beon	133	Diboss	200	Gorenje	167
Best	167	Dixi	143	Gpm	191
Bestar	207	Dmtech	176	Gardin	191
Blackstripe	212	Dual	226	Graetz	182
Blaupunkt	217	Dumont	207	Gran Prix	221
Blue Sky	203	Dynatech	212	Granada	235
Boxford	119	Ecrom	185	Grandin	157
Brandt	211	Elbe	215	Grenadier	143

Brandt Electronique	178	Elbit	143	Gronic	207
Braun	101	Elcit	173	Grundig	237
Brionvega	153	Electrohome	162	Grunkel	185
Brockwood	212	Electronika	148	Gtt	221
Broksonic	212	Elekta	221	Haier	154
Hallmark	212	Kolster	208	Mtc	212
Hanseatic	226	Konka	136	Multichoice	137
Hantarex	202	Korpel	207	Multitec	185
Harley Davidson	212	Körting	167	Multitech	209
Harrad	212	Ktv	212	Murphy	156
Harvard	212	Kuasho	208	Naonis	215
Hb Ingelen	203	Kuba	198	Nec	161
Hcm	221	Kuba Electronic	198	Neckermann	229
Hifivox	178	Lavis	147	Nei	219
Hinari	208	Legend	143	Neovia	131
Hisense	102	Lenco	208	Newtech	143
Hitachi	246	Lenoir	233	Nikkai	191
Hoher	203	Leyco	191	Nikko	121
Höher	150	Lg	186	Noblex	118
Home Electronics	119	Liesenkötter	163	Nobliko	184
Humax	158	Lifetec	192	Nogamatic	178
Hyper	191	Linitron	212	Nokia	242
Hypson	173	Lloyd S	162	Nordmende	178
Hyundai	159	Loewe	171	Northern Star	106
Ibervisao	226	Logik	220	Nova	144
Ice	191	Lögik	164	Novatronic	143
Ima	212	Luma	215	Oceanic	210
Imperial	207	Lumatron	215	Okano	120
Infratex	170	Lux-May	219	Onceas	202
Ingelen	182	Luxor	230	Onwa	191
Inno Hit	202	Lxi	212	Orava	143
Interbuy	173	M Electronics	210	Orion	236
Interdiscount	151	Magasin	186	Osaki	191
Interfunk	194	Magnadyne	202	Otava	138
Intervision	221	Magnafon	184	OTHER_BRANDS	247
Irradio	208	Magnasonic	212	Others	231
Iskra	134	Magnavox	163	Otto Versand	243
Ist	191	Magnum	105	Ovp	107
Isukai	191	Manesth	227	Pael	121
Its	191	Marantz	132	Palladium	169
Itt	195	Mark	169	Panama	173
Itv	212	Mascom	221	Panasonic	205
Jacson	103	Matsui	220	Pathe	149
Jetpoint	204	Mediator	163	Pathe Marconi	178
Jrc	219	Medion	189	Pce/Pec	212
Jvc	174	Melectronic	218	Peacock	110
Kaisui	191	Memorex	212	Penney	212
Kambrook	151	Memory	150	Philco	206
Kapsch	175	Memphis	204	Philips	241
Karcher	221	Mercury	143	Phoenix	214
Kds	104	Merrit	182	Phonola	163
Kendo	216	Metz	213	Pioneer	179
Kenmark	166	Micromaxx	185	Plantron	173

Kennedy	175	Minerva	160	Playsonic	203
Kenwood	142	Mirai	126	Policom	211
Keymat	125	Mitsubishi	181	Portland	204
Kiton	185	Mitsubushi	185	Prandoni Prince	202
Kh	175	Mivar	155	Prima	212
Kneissel	215	Motorola	212	Pringston	192
Prinz	132	Sice	160	Teleview	221
Proelco	148	Siemens	217	Telra	221
Profex	152	Sierra	163	Tensai	226
Profilo	200	Siesta	167	Tesla	202
Profitronic	221	Silva Schneider	200	Tevion	189
Proline	166	Silver	144	Thomas	204
Prosonic	111	Singer	173	Thomson	223
Protec	173	Sinudyne	201	Thorn	238
Protech	199	Sky	127	Thorn-Ferguson	197
Proton	162	Sogo	200	Tokai	132
Provision	199	Solavox	182	Tokyo	122
Pulser	204	Sonitron	232	Toshiba	225
Quadro	185	SONiX	130	Tosonic	212
Quasar	173	Sonoko	173	Towada	202
Quelle	245	Sonor	210	Trc	221
Radio Shack	212	Sontec	207	Triax	123
Radiola	163	Sony	183	Trilux	141
Radiomarelli	202	Sound & Vision	208	Triumph	116
Radionette	182	Soundcolor	221	Uher	188
Radiotone	233	Sounddesign	212	Ultravox	173
Rank	156	Spectrician	208	Uma	187
Rca	122	Standard	202	Unimor	191
Recor	143	Star	139	United	214
Record	148	Starlite	221	Universum	233
Red Star	221	Stern	215	Univox	202
Rediffusion	182	Sunkai	113	Uranya	173
Revox	188	Sunwood	143	Vanguard	162
Rex	215	Supertec	192	Veco	143
Rft	167	Supertech	152	Vestel	185
Roadstar	214	Swisstec	168	Vexa	143
Royal	221	Symphonic	212	Videoseven	130
Royal Nec	192	Talent	160	Videoton	165
Saba	211	Tandberg	140	ViewSonic	108
Sagem	112	Tandy	191	Vision	221
Saisho	164	Tashiko	146	Voxson	202
Saivod	203	Tatung	193	Waltham	165
Sakio	209	Teak	233	Wards	174
Salora	218	Tec	172	Watson	192
Sambers	208	Techline	227	Watradio	184
Samsung	239	Technica	176	Wega	180
Sansui	212	Technisat	114	Wegavox	221
Sany	151	Technol	143	Welltech	192
Sanyo	232	Techwood	176	Welstar	150
Sbr	163	Tecnimagen	128	Whirlpool	123
Schaub Lorenz	182	Tecnison	221	Westinghouse	188
Schneider	240	Tedelex	143	Windsor	157

Scott	162	Teknant	143	Winston	143
Sea	150	Tekon	204	World Of Vision	131
Seg	227	Teleavia	211	Worldview	143
Seleco	216	Telefunken	222	Yamaha	129
Sentra	144	Telerent	115	Yoko	192
Sharp	196	Teleservice	160	York	209
Shivaki	148	Telestar	221	Zanela	117
Siarem	173	Teletech	157	Zanussi	215
Sicatel	120	Teleton	175		

Memo

ATEVIO

Digitaler High Definition-Satellitenreceiver

AV 7000HD PVR